

HART® 7.x Field Device Specification for AMI-II pH-Redox Transmitters

SWAN Analytical Instruments
8340, Studbachstrasse 13
Hinwil
Switzerland

TABLE OF CONTENTS

1. Introduction.....	4
1.1 Scope.....	4
1.2 Purpose.....	4
1.3 Who should use this document?	4
1.4 References.....	4
2. Device Identification.....	5
3. Product Overview	5
3.1 Connections.....	5
3.1.1 Point to point Mode	5
3.1.2 Multidrop Mode	6
3.1.3 HARTREC Board	6
4. Product Interfaces	7
4.1 Process Interface	7
4.1.1 Sensor Input Channels	7
4.2 Process Flow Rate 4-20mA Analog Output.....	7
4.3 Local Interfaces.....	7
4.3.1 Local Controls and Displays.....	7
4.3.2 Write Protection	7
5. Device Variables.....	7
5.1 Device Variable 0 Measured Value	8
5.2 Device Variable 1 Flow Rate.....	8
5.3 Device Variable 2 Temperature	8
5.4 Device Variable 3 Case Temperature	8
6. Dynamic Variables.....	9
6.1 Mappable Variables	9
6.2 PV Transfer Functions	9
7. Status Information.....	10
7.1 Field Device Status	10
7.2 Extended Device Status	10
7.3 Additional Device Status (Command #48).....	11

8. Universal Commands.....	12
9. Common-Practice Commands	14
9.1 Supported Common Practice Commands	14
9.2 Burst Mode.....	14
9.3 Catch Device Variable	14
10. Device-Specific Commands.....	14
11. Tables 15	
11.1 Engineering Type Unit Codes.....	15
11.2 Classification Type Unit Codes	15
12. Performance	16
12.1 Sampling Rates	16
12.2 Power-Up	16
12.3 Command Response Times.....	16
12.4 Long Messages.....	16
12.5 Non-Volatile Memory.....	16
12.6 Modes.....	16
12.7 Write Protection	16
12.8 Damping.....	16
Annex A. Capability Checklist.....	17
Annex B. Default Configuration	18
Annex C. Revision History	19

1. INTRODUCTION

1.1 Scope

The SWAN Analytical Instruments model AMI-II pH-Redox transmitter complies with HART Protocol Revision 7.5. This document specifies all the device specific features and documents HART Protocol implementation details (i.e. the Engineering Unit Codes supported). The functionality of this Field Device is described sufficiently to allow its proper application in a process and its complete support in HART capable Host Applications.

1.2 Purpose

This specification is designed to compliment the AMI-II pH-Redox manual by providing a complete description of this Field Device from a HART Communication perspective.

1.3 Who should use this document?

The specification is designed to be a technical reference for HART capable Host Application Developers, System Integrators and knowledgeable End Users. It also provides functional specifications (e.g., commands and performance requirements) used during development, maintenance and testing. This document assumes the reader is familiar with HART Protocol requirements and terminology.

1.4 References

HART Smart Communications Protocol Specification. HCF_SPEC-12. Available from the HCF.

MenAMI2_pH-Redox_xx.pdf. Available from the SWAN Analytical Instruments web page.

2. DEVICE IDENTIFICATION


Manufacturer Name:	SWAN Analytical Instruments	Model Name(s):	AMI-II pH-Redox
Manufacturer ID Code:	24757 (60B5 Hex)	Device Type Code:	58928 (E630 Hex)
HART Protocol Revision	7.5	Device Revision:	1
Number of Device Variables	4		
Physical Layers Supported	FSK		
Physical Device Category	Transmitter, Non-DC-isolated Bus Device		

3. PRODUCT OVERVIEW

The AMI-II HART communication option board provides a 4 to 20mA output signal and can be monitored and configured using a HART master device or a hand-held communicator.


3.1 Connections

3.1.1 Point to point Mode

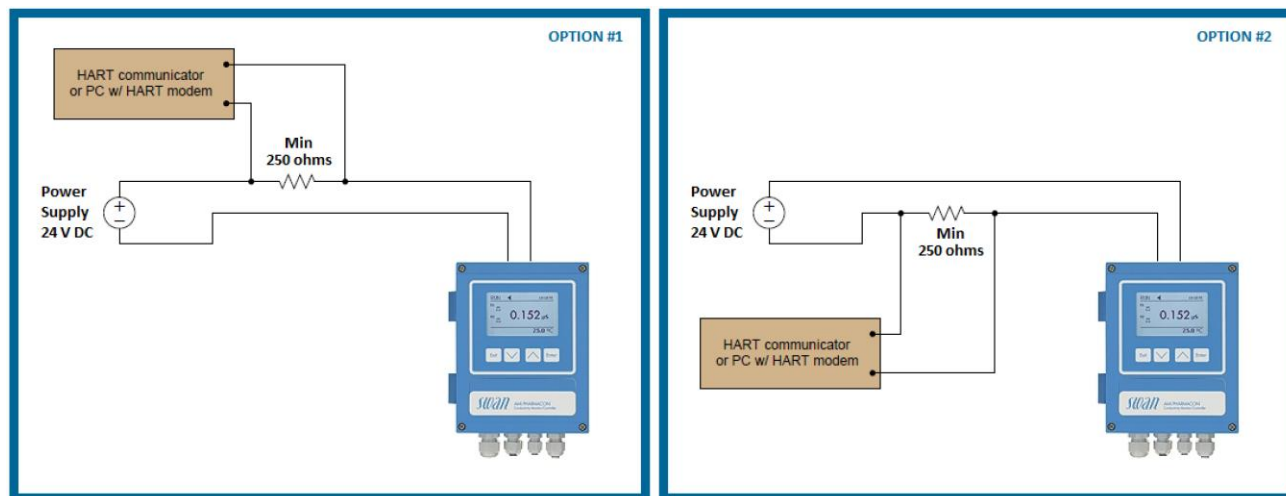


An external minimum 250 Ω (maximum 800 Ω) resistor is needed in order to communicate with HART protocol.

3.1.2 Multidrop Mode

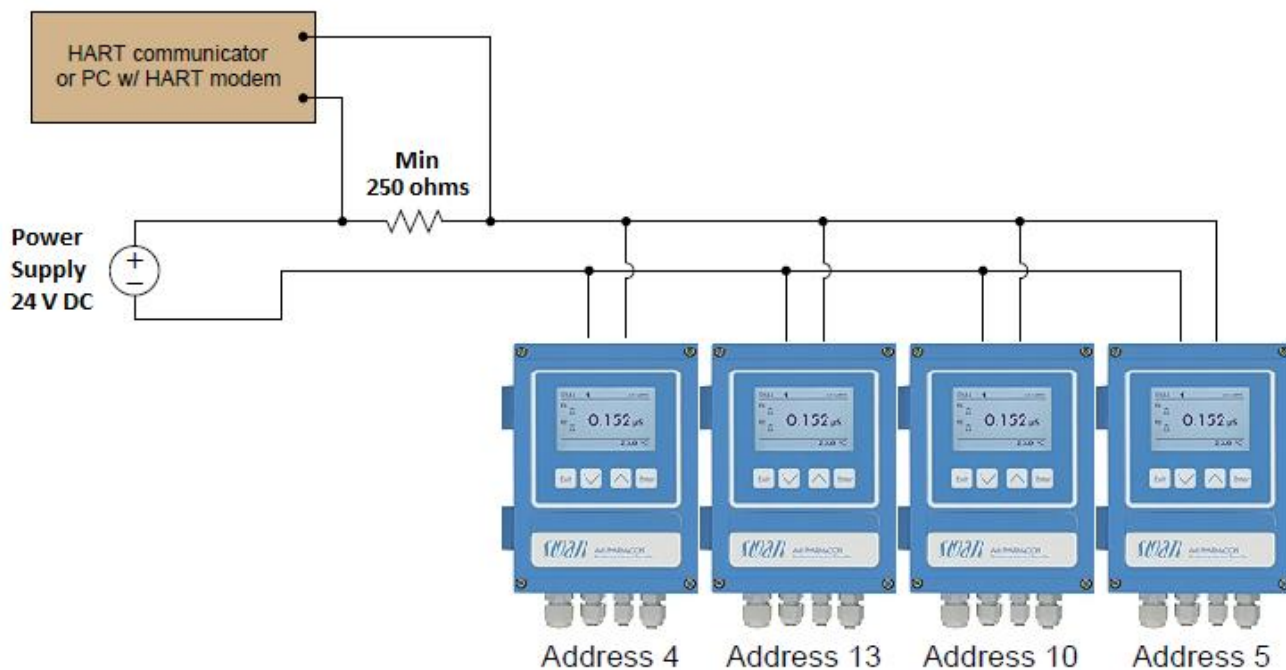

A single minimum 250 Ω resistor (maximum 800 Ω) is needed to communicate with all the instruments connected to the bus, and each of them must provide 4mA.

3.1.3 HARTREC Board

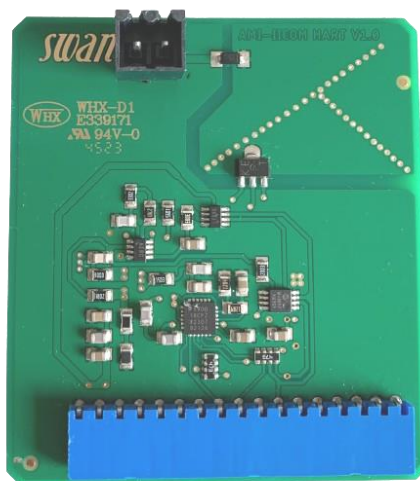

The HARTREC Board must be installed in the AMI-II transmitter in order to communicate with HART.

4. PRODUCT INTERFACES

4.1 Process Interface

4.1.1 Sensor Input Channels

Refer to AMI-II pH-Redox manual to details on mounting pH, Redox, Temperature and Flow sensors.

4.2 Process Flow Rate 4-20mA Analog Output

The 4 to 20mA output of the AMI-II pH-Redox HART option board represents a process value measurement, scaled according to the configured range of the instrument. This output corresponds to the Primary Variable. HART Communication is supported on this loop.

Since Dynamic Variables are mappable, PV can correspond to one of the following variables:

- Measured Value (pH or Redox)
- Temperature
- Flow Rate

It is also possible to set the PV from the instrument local display, in the “Signal Output 3 / Parameter” settings.

4.3 Local Interfaces

4.3.1 Local Controls and Displays

This device has a local display that allows the complete configurability of the instrument.

Refer to AMI-II pH-Redox manual to details on it.

4.3.2 Write Protection

The Field Device has no “Write protection mode”.

5. DEVICE VARIABLES

This Field Device exposes four Device Variables

Device Variables	Variables Meaning	Units
0	Measured Value	pH / Redox
1	Flow Rate	l/h
2	Temperature	°C
3	Case Temperature	°C

5.1 Device Variable 0 Measured Value

Measured Value corresponds to pH [pH] or Redox [mV], based on the instrument mounted (Refer to AMI-II pH-Redox manual for additional details).

5.2 Device Variable 1 Flow Rate

Flow Rate is read by the Flow sensor, when mounted (Refer to AMI-II pH-Redox manual for additional details).

5.3 Device Variable 2 Temperature

Temperature is read by the Temperature sensor, when mounted (Refer to AMI-II pH-Redox for additional details).

5.4 Device Variable 3 Case Temperature

Case Temperature shows the Temperature read inside the Electronic Box.

6. DYNAMIC VARIABLES

6.1 Mappable Variables

Three mappable Dynamic Variables are implemented.

Dynamic Variables	Variables Meaning	Units
PV	pH/Redox - Flow Rate - Temperature	pH/mV - l/h - °C
SV	pH/Redox - Flow Rate - Temperature	pH/mV - l/h - °C
TV	pH/Redox - Flow Rate - Temperature	pH/mV - l/h - °C

It is possible to associate any of these dynamic variables to PV, SV, or TV, with a HART Master (or Handheld Communicator).

The PV is also settable from the instrument local display's settings.

6.2 PV Transfer Functions

The Primary Variable Transfer Function can be read with command 15. Its meaning is referred to the following table.

Transfer Function Type	Code
Linear	240
Bilinear	241
Logarithmic	242
Control Upwards	243
Control Downwards	244

7. STATUS INFORMATION

7.1 Field Device Status

The functions of the Field Device Status bits are specified in HCF_SPEC-99. Further details of their implementation are described in the following table.

Bit	Name	Notes
7	Device Malfunction	Set on any detected Hardware Error
6	Configuration Changed	Set if any changes are made to Field Device Configuration
5	Cold Start	Set when powered-up or after a device reset
4	More Status Available	Set if any Alarm or Maintenance has changed its status. More information is available via command 48
3	Loop Current Fixed	The Loop Current is being held at a fixed value and is not responding to process variations
2	Loop Current Saturated	The Loop Current has reached its upper (or lower) endpoint limit and cannot increase (or decrease) any further
1	Non-PV Out of Limits	A Device Variable not mapped to the PV is beyond its operating limits
0	PV Out of Limits	The PV is beyond its operating limit

7.2 Extended Device Status

Contains additional information regarding the status of the Field Device.

Bit	Name	Notes
2	Critical Power Failure	Set when battery is becoming critically low (less than 15 min) and Field Device not connected to Power Supply
1	Device Variable Alert	Set when one or more Device Variables are in one of the following conditions: • Hi/low limited (Limit Status) • Bad (Process Data Status) • Poor Accuracy (Process Data Status)
0	Maintenance Required	Not Used

7.3 Additional Device Status (Command #48)

Command #48 returns 4 additional bytes of data (Int32 Little Endian), with the following status information:

Byte	Bit	Meaning	Alarm Code
0 – 3 (INT32)	0	Alarm high	E001
	1	Alarm low	E002
	2	Reserved	
	3	Reserved	
	4	Reserved	
	5	Reserved	
	6	Sample Temp. high	E007
	7	Sample Temp. low	E008
	8	Sample Flow high	E009
	9	Sample Flow low	E010
	10	Temp. shorted	E011
	11	Temp. disconnected	E012
	12	Case Temp. high	E013
	13	Case Temp. low	E014
	14	Reserved	
	15	Reserved	
	16	Control Timeout	E017
	17	Quality Assurance	E018
	18	Reserved	
	19	Reserved	
	20	Reserved	
	21	Reserved	
	22	Reserved	
	23	Input active	E024
	24	IC MK41T56	E025
	25	IC LM75	E026
	26	Reserved	
	27	Reserved	
	28	Reserved	
	29	I2C Frontend	E030
	30	Cal. Recout	E031
	31	Wrong Frontend	E032

"Reserved" bits are always set to 0.

All bits used in these bytes indicate device or sensor failure, and always set bit 4 of the Device Status byte.

8. UNIVERSAL COMMANDS

Number	Name	Notes
0	Read Unique Identifier	Returns identity information of the Field Device
1	Read Primary Variable	Returns PV value and its unit
2	Read Loop Current and Percent of Range	Returns AO value and % range
3	Read Dynamic Variables and Loop Current	Returns PV, SV and TV values and corresponding unit values along with AO value
6	Write Polling Address	Changes Field Device's polling address and loop current mode
7	Read Loop Configuration	Returns polling address and loop current mode status
8	Read Dynamic Variable Classifications	Returns dynamic variables classification
9	Read Device Variables with Status	Returns device variables with status
11	Read Unique Identifier Associated With Tag	Same response as command 0 when Tag matches
12	Read Message	Returns 24 bytes of packed ASCII data
13	Read Tag, Descriptor, Date	Returns tag, descriptor (packed ASCII format) and date from the device
14	Read Primary Variable Transducer Information	Returns PV transducer limits and span
15	Read Device Information	Returns PV unit value, LRV, URV, damping value and write protect code
16	Read Final Assembly Number	Returns final assembly number
17	Write Message	Write 24 bytes of packed ASCII data.
18	Write Tag, Descriptor, Date	Writes tag, descriptor (packed ASCII format) and date to the device

19	Write Final Assembly Number	Writes final assembly number to the device
20	Read Long Tag	Returns 32-byte Long Tag
21	Read Unique Identifier Associated with Long Tag	Same response as command 0 when Long Tag matches
22	Write Long Tag	Writes Long Tag to the Field Device
38	Reset Configuration Changed Flag	Resets the configuration change flag
48	Read Additional Device Status	See 7.3 for details

9. COMMON-PRACTICE COMMANDS

9.1 Supported Common Practice Commands

Number	Name	Notes
33	Read Device Variables	Returns all the Supported Device Variables
50	Read Dynamic Variable Assignment	Returns the Variable Numbers associated with PV, SV and TV
51	Write Dynamic Variable Assignment	Writes the Variable Numbers associated with PV, SV and TV

9.2 Burst Mode

This Field Device does not support Burst Mode.

9.3 Catch Device Variable

This Field Device does not support Catch Device Variable.

10. DEVICE-SPECIFIC COMMANDS

This Field Device does not support Device Specific Commands.

11. TABLES

11.1 Engineering Type Unit Codes

Units of Measurement	Unit Code
Temperature Degrees Celsius	32
Electric Potential millivolts	36
Electric Resistance Ω	37
Miscellaneous Hertz	38
Electric Current milliamperes	39
Time Minutes	50
Time Seconds	51
Time Hours	52
Time Days	53
Miscellaneous Percent	57
Electric Potential Volts	58
Miscellaneous pH	59
Miscellaneous Micro Siemens per centimeter	67
Flow Liters per hour	138
Concentration Parts per million	139
Electric Resistance $k\Omega$	163
Concentration Parts per billion	169
Not used	250
Special	253

11.2 Classification Type Unit Codes

Measurement	Meas. Code
Temperature	64
Volumetric flow	66
Time	70
Frequency	80
Analytical	81
Electric Potential	83
Current	84
Resistance	85
Conductance	87
Concentration	90
Turbidity	97
Not used	250
Special	253

12. PERFORMANCE

12.1 Sampling Rates

Typical sampling rates are shown in the following table.

pH sensor value sample	1 per second
Redox sensor value sample	1 per second
Flow rate sensor value sample	1 per second
Case Temperature sensor sample	1 per second
Temperature sensor sample	1 per second

Note: all the Device Variables use an Infinite Impulse Response Filter, with coefficients depending on the measured variable. The Damping Value is different for each of the Device Variables, and can be read with command 15.

12.2 Power-Up

On power up, the transmitter takes approximately 8 seconds to be ready. During this period, the device will not respond to HART commands.

12.3 Command Response Times

Minimum	2ms
Typical	5ms
Maximum	150ms

12.4 Long Messages

The largest data field used is in the response to command 9: up to 71 bytes including the two status bytes.

12.5 Non-Volatile Memory

EEPROM is used to hold the device's configuration parameters. New data is written to this memory immediately on execution of a write command, before the consequent response.

12.6 Modes

Loop current mode can be disabled or enabled using command 6.

12.7 Write Protection

Write-protection is not selectable, and is always set as "not write protected".

12.8 Damping

Damping time is calculated for each dynamic variable.

ANNEX A. CAPABILITY CHECKLIST

Manufacturer, model and revision	SWAN Analytical Instruments, AMI-II pH-Redox rev. 1
Device type	Transmitter
HART revision	7.x
Device Description available	Yes
Number and type of sensors	5 (four external, one internal)
Number and type of actuators	0
Number and type of host side signals	1: 4 - 20mA analog
Number of Device Variables	4
Number of Dynamic Variables	3
Mappable Dynamic Variables?	Yes
Number of common-practice commands	3
Number of device-specific commands	0
Bits of additional device status	32
Alternative operating modes?	No
Burst mode?	No
Write-protection?	No

ANNEX B. DEFAULT CONFIGURATION

Parameter	Default value
Sensor Type	pH or Redox (depends on the sensor mounted)
Lower Range Value	-3.0 pH / -1500mV
Upper Range Value	15.0 pH / 1500mV
PV Units	pH / mV
Damping time constant	4.77 seconds
Fault-indication jumper	Not used
Write-protect jumper	Not used
Number of response preambles	5

ANNEX C. REVISION HISTORY

Document Title	HART Interface Description AMI-II pH-Redox			
Document ID	A-96.310.481			
Document Revision	Date	Device Revision	DD Revision	Description
1.0	06/12/2024	1	1	First release, for HART 7.x Device