

Operator's Manual

Firmware V6.20 and higher



SWISS  MADE



Customer Support

Swan and its representatives maintain a fully trained staff of technical specialists around the world. For any technical question, contact your nearest Swan representative, or the manufacturer:

Swan Analytische Instrumente AG
Studbachstrasse 13
8340 Hinwil
Switzerland

Internet: www.swan.ch
E-mail: support@swan.ch

Document Status

Title:	AMI Codes-II TC Operator's Manual	
ID:	A-96.250.631	
Revision	Issue	
01	November 2010	First edition
02	December 2013	Update to Rev. 5.40, mainboard V2.4
03	May 2017	Update to Rev. 6.00, mainboard V2.5
04	June 2020	Mainboard V2.6

© 2020, Swan Analytische Instrumente AG, Switzerland, all rights reserved.

The information contained in this document is subject to change without notice.

Table of Contents

1. Safety Instructions	6
1.1. Warning Notices	7
1.2. General Safety Regulations	9
1.3. Restrictions for use	10
2. Product Description	11
2.1. Instrument Specification	17
2.2. Instrument Overview	19
3. Installation	20
3.1. Installation Check List	20
3.2. Mounting of Instrument Panel	21
3.3. Connecting Sample and Waste	21
3.3.1 FEP Tube at Sample Inlet	21
3.3.2 FEP Tube at Sample Outlet	22
3.4. Installation of Flow Cell	23
3.5. Install the Option pH	24
3.5.1 pH as Option ex works	24
3.5.2 pH Option as Retrofit Kit	25
3.6. Electrical Connections	28
3.6.1 Connection Diagram	30
3.6.2 Power Supply	31
3.7. Input	32
3.8. Relay Contacts	32
3.8.1 Alarm Relay	32
3.8.2 Relay 1 and 2	33
3.9. Signal Outputs	35
3.9.1 Signal Output 1 and 2 (current outputs)	35
3.10. Interface Options	35
3.10.1 Signal Output 3	36
3.10.2 Profibus, Modbus Interface	36
3.10.3 HART Interface	37
3.10.4 USB Interface	37
4. Instrument Setup	38
4.1. Prepare Reagents	38
4.2. Peristaltic Pump	38
4.3. Establish Sample Flow	39
4.4. Fill or Flush Reagent System	40
4.5. Programming	40
4.6. Calibration	41

5. Operation	42
5.1. Keys	42
5.2. Display	43
5.3. Software Structure	44
5.4. Changing Parameters and values	45
6. Maintenance	46
6.1. Maintenance Schedule	46
6.2. Stop of Operation for Maintenance	47
6.3. Refill or replace Reagents	48
6.3.1 Reagents for Measuring Total Chlorine	50
6.4. Verification	51
6.5. Calibration	52
6.6. Cleaning the protective Filter	55
6.7. Cleaning the Photometer	56
6.8. Cleaning the Flow Cell	57
6.8.1 Disassemble the Flow Cell	57
6.8.2 Assemble the Flow Cell	58
6.9. Maintenance of pH sensor	59
6.10. Tube Replacement	60
6.10.1 Replace the Pump Tubes	60
6.10.2 Replace the Reagent Tubes	62
6.11. Cleaning the solenoid valve	63
6.12. Longer Stop of Operation	65
7. Troubleshooting	66
7.1. General Instructions	66
7.2. Calibration Errors	67
7.2.1 Process calibration tc2	67
7.2.2 Process pH	67
7.2.3 Standard pH	67
7.3. Error List	68
7.4. Opening the peristaltic pump housing	73
7.5. Replacing Fuses	74
8. Program Overview	75
8.1. Messages (Main Menu 1)	75
8.2. Diagnostics (Main Menu 2)	76
8.3. Maintenance (Main Menu 3)	77
8.4. Operation (Main Menu 4)	78
8.5. Installation (Main Menu 5)	79

9. Program List and Explanations 81

 1 Messages 81

 2 Diagnostics 81

 3 Maintenance 83

 4 Operation 86

 5 Installation 87

10. Material Safety Data sheets 102

10.1. Reagents 102

11. Default Values 103

12. Index 107

13. Notes 109

Operator's Manual

This document describes the main steps for instrument setup, operation and maintenance.

1. Safety Instructions

General	<p>The instructions included in this section explain the potential risks associated with instrument operation and provide important safety practices designed to minimize these risks.</p> <p>If you carefully follow the information contained in this section, you can protect yourself from hazards and create a safer work environment.</p> <p>More safety instructions are given throughout this manual, at the respective locations where observation is most important. Strictly follow all safety instructions in this publication.</p>
Target audience	<p>Operator: Qualified person who uses the equipment for its intended purpose.</p> <p>Instrument operation requires thorough knowledge of applications, instrument functions and software program as well as all applicable safety rules and regulations.</p>
OM Location	<p>Keep the AMI Operator's Manual in proximity of the instrument.</p>
Qualification, Training	<p>To be qualified for instrument installation and operation, you must:</p> <ul style="list-style-type: none">♦ read and understand the instructions in this manual as well as the Material Safety Data Sheets.♦ know the relevant safety rules and regulations.

1.1. Warning Notices

The symbols used for safety-related notices have the following meaning:



DANGER

Your life or physical wellbeing are in serious danger if such warnings are ignored.

- ♦ Follow the prevention instructions carefully.



WARNING

Severe injuries or damage to the equipment can occur if such warnings are ignored.

- ♦ Follow the prevention instructions carefully.



CAUTION

Damage to the equipment, minor injury, malfunctions or incorrect process values can be the consequence if such warnings are ignored.

- ♦ Follow the prevention instructions carefully.

Mandatory Signs

The mandatory signs in this manual have the following meaning:



Safety goggles



Safety gloves

Warning Signs The warning signs in this manual have the following meaning:



Electrical shock hazard



Corrosive



Harmful to health



Flammable



Warning general



Attention general

1.2. General Safety Regulations

Legal Requirements

The user is responsible for proper system operation. All precautions must be followed to ensure safe operation of the instrument.

Spare Parts and Disposables

Use only official SWAN spare parts and disposables. If other parts are used during the normal warranty period, the manufacturer's warranty is voided.

Modifications

Modifications and instrument upgrades shall only be carried out by an authorized Service Technician. SWAN will not accept responsibility for any claim resulting from unauthorized modification or alteration.

WARNING

Electrical Shock Hazard



If proper operation is no longer possible, the instrument must be disconnected from all power lines, and measures must be taken to prevent inadvertent operation.

- ♦ To prevent from electrical shock, always make sure that the ground wire is connected.
- ♦ Service shall be performed by authorized personnel only.
- ♦ Whenever electronic service is required, disconnect instrument power and power of devices connected to.
 - relay 1,
 - relay 2,
 - alarm relay

WARNING



For safe instrument installation and operation you must read and understand the instructions in this manual.

WARNING



Only SWAN trained and authorized personnel shall perform the tasks described in this document.

1.3. Restrictions for use

The sample must not contain any particles that may block the flow cell. Sufficient sample flow is coercive for the correct function of the instrument.

If the sample contains only little disinfectant concentrations, or there is the danger of biological growth, we recommend to use the optional Cleaning module from Swan.

WARNING



Health hazard

Some reagents are etching and can cause severe burns or eye damage.

- ♦ For safe handling of the reagents you must read and understand the instructions in this manual, as well as the Material Safety Data Sheets (MSDS)

Download MSDS

The current Material Safety Data Sheets (MSDS) for the below listed Reagents are available for downloading at **www.swan.ch**.

- ♦ OXYCON ON-LINE DPD
- ♦ OXYCON ON-LINE Buffer
- ♦ OXYCON ON-LINE KI
- ♦ Buffer solution pH 4
- ♦ Buffer solution pH 7
- ♦ Buffer solution pH 9

2. Product Description

Application range

The AMI Codes-II TC is a complete monitoring system for the automatic, continuous measurement and dosing control of chlorine based on the DPD colorimetric method APHA 4500 Cl-G and on EN ISO 7393-2.

It can be used for measuring disinfectants in:

- ♦ Pools and sanitary water
- ♦ Cooling water
- ♦ Waste water effluent

It is also applicable for water containing additives like corrosion inhibitors, cyanuric acid and antiscalants.

Determines total chlorine (tc1 and tc2) and calculates dichloramine.

Necessary reagents:

- ♦ Oxycon on-line DPD
- ♦ Oxycon on-line Buffer
- ♦ Oxycon on-line KI

Disinfectant measurement

Disinfectant	Measuring range	Accuracy
Total chlorine (Standard Mode)	0.00–1.00 ppm	± 0.01 ppm
	1.00–3.00 ppm	± 0.06 ppm
	3.00–5.00 ppm	± 0.20 ppm
Total chlorine (Extended Mode)	0.0–10 ppm	± 10%

Operating modes

Two operating modes are available depending on the desired measuring range. Default mode “Standard” for concentrations up to 5 ppm. Select “Extended” for measurements up to 10 ppm which will lead to higher reagent consumption.

Signal outputs

Two signal outputs programmable for measured values (freely scalable, linear or bilinear) or as continuous control output (control parameters programmable).

Current loop: 0/4–20 mA


Maximal burden: 510 Ω

Third signal output available as an option. The third signal output can be operated as a current source or as a current sink (selectable via switch).

Relay	<p>Two potential-free contacts programmable as limit switches for measuring values, controllers or timer for system cleaning with automatic hold function. Both contacts can be used as normally open or normally closed.</p> <p>Maximum load: 1 A/250 VAC</p>
Alarm relay	<p>One potential free contact.</p> <p>Alternatively:</p> <ul style="list-style-type: none">♦ Open during normal operation, closed on error and loss of power.♦ Closed during normal operation, open on error and loss of power. <p>Summary alarm indication for programmable alarm values and instrument faults.</p>
Input	<p>For potential-free contact to freeze the measuring value or to interrupt control in automated installations (hold function or remote-off).</p>
Special feature	<p>Possibility to interrupt the measurement by activating the input. See Program List and Explanation, 5.3.4, p. 99.</p>
Safety features	<p>No data loss after power failure. All data is saved in non-volatile memory. Overvoltage protection of inputs and outputs. Galvanic separation of measuring inputs from signal outputs.</p>
Communication interface (optional)	<ul style="list-style-type: none">♦ USB Interface for logger download.♦ Third signal output (can be used in parallel to the USB interface)♦ RS485 with Fieldbus protocol Modbus or Profibus DP♦ HART interface
pH	<p>Optional pH measurement is possible (pH correction or calibration).</p>
Relay box	<p>The AMI Relay Box is designed for the direct power supply and activation of dosing devices which are controlled with an AMI transmitter, e. g. to connect two solenoid valves or one motor valve for disinfectant additions.</p>
Cleaning module	<p>Optional module for automatic chemical cleaning.</p>

Glossary Abbreviations used for the chlorine forms measured:

Abbr.	Term	Comment
tc1	<u>T</u> otal <u>c</u> hlorine <u>1</u>	Immediate reaction of DPD + KI (mainly monochloramine)
tc2	<u>T</u> otal <u>c</u> hlorine <u>2</u>	Reaction with DPD + KI after 2 min. reaction
cdc	<u>C</u> alculated <u>d</u> ichloramine	$cdc = tc2 - tc1$
pH/T	<u>p</u> H and <u>T</u> emperature	(Optional)
B/s	<u>B</u> ubbles per <u>s</u> econd	Sample flow

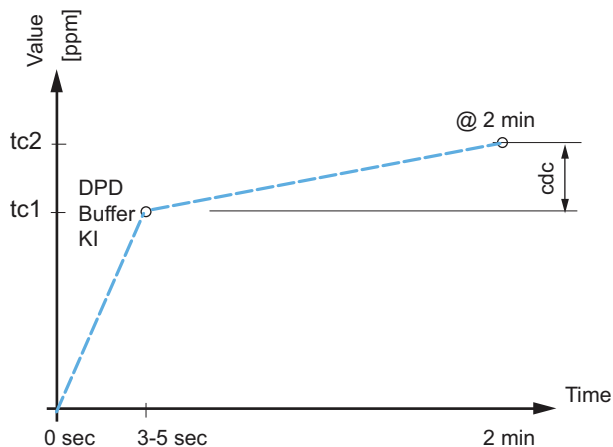


Fluidics The sample flows through the sample inlet [P] and the inlet filter [H] into the constant head [A]. Adjust the flow regulating valve [F] so that always a small part of the sample flows through the overflow tube [B] into the constant head drain [O].

Total chlorine 1 Here the reagents [L] and [M] are added. Sample and reagent flow through the photometer [J] and total chlorine 1 is measured.

Total chlorine 2 To ensure the necessary reaction time of 2 min. for the determination of total chlorine 2, the sample flow is stopped by the solenoid valve [G]. After the time has elapsed, total chlorine 2 is measured and the solenoid valve [G] opens again.

After the measurement the sample flows through the outlet of the photometer where it will be aerated through air inlet [I] to generate bubbles. Then the sample flows through the bubble detector [K] into the photometer drain [N].

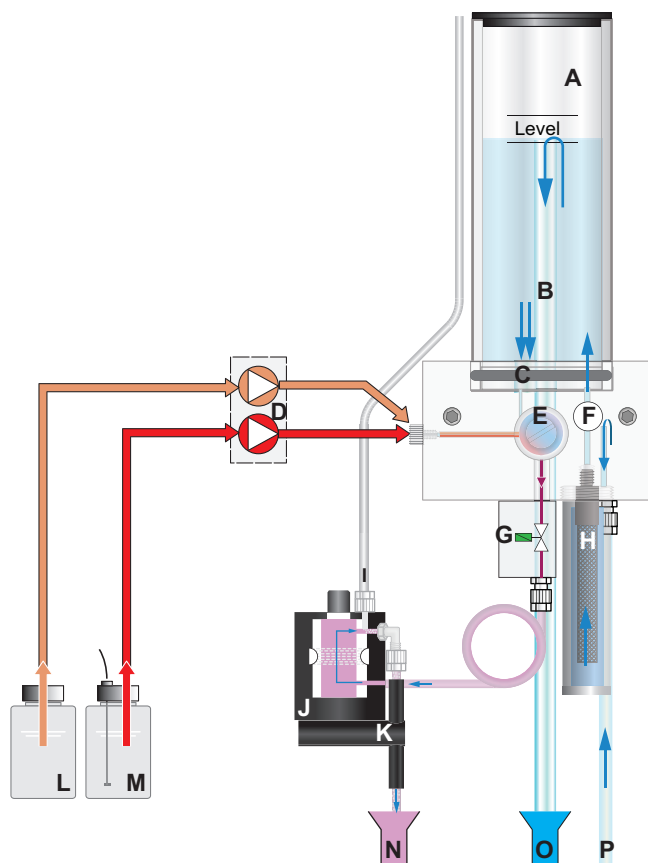


- | | |
|--------------------------------|--|
| A Constant head | I Photometer air inlet |
| B Overflow tube | J Photometer |
| C Photometer inlet | K Air bubble detector |
| D Peristaltic pump | L Reagent Oxycon on-line DPD |
| E Mixing chamber | M Reagent Oxycon on-line Buffer |
| F Flow regulating valve | N Photometer drain |
| G Solenoid valve | O Constant head drain |
| H Inlet Filter | P Sample inlet |

**Time
interval of a
measurement**

The measuring interval can be set between 3 and 60 minutes. The time sequence of a measurement with a measuring interval of 5 min is shown in the diagram below.

The blue bar represents the flowing sample. A short time before the measurement starts, a zero point measurement is performed. Then the peristaltic pump starts and a small portion of the reagents [L] and [M] is pumped into the mixing chamber.


A short time after, when the mixture is in the photometer, the solenoid valve [G] is energized and the sample flow through the photometer is stopped. Immediately after that, the total chlorine 1 is measured. After 120 sec. the total chlorine 2 is measured. After the measurement is finished, the solenoid valve [G] is de-energized and sample flows through the photometer until the next measurement starts.

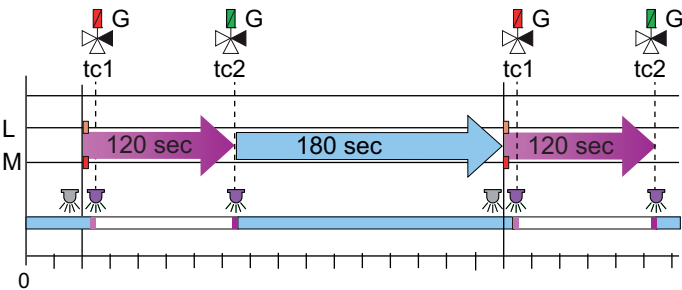


2.1. Instrument Specification

Power Supply	AC variant:	100–240 VAC ($\pm 10\%$) 50/60 Hz ($\pm 5\%$)
	DC variant	10–36 VDC
	Power consumption:	max. 35 VA
Transmitter specifications	Housing:	aluminum, with a protection degree of IP 66 / NEMA 4X
	Ambient temperature:	–10 to +50 °C
	Storage and transport:	–30 to +85 °C
	Humidity:	10–90% rel., non condensing
Sample requirements	Display:	backlit LCD, 75 x 45 mm
	Flow rate:	min. 10 l/h
	Temperature:	5 - 50 °C (41 - 122 °F)
	Inlet pressure:	0.15 - 2 bar (2 - 28 PSI)
	Outlet pressure:	pressure free
Note: No oil, no grease, no sand.		
On-site requirements	The analyzer site must permit connections to:	
	Sample inlet:	Tube 6 x 8 mm
	Sample outlet:	2 Drains, 1/2" hose nozzle for flexible tube diam. each 20x15 mm

Dimensions	Panel:	PVC
	Dimensions:	400x850x200 mm
	Screws:	5 mm or 6 mm diameter
	Weight:	12.0 kg / 26.5 lbs without reagents and sample water
		17.0 kg / 37.5 lbs with reagents and sample water

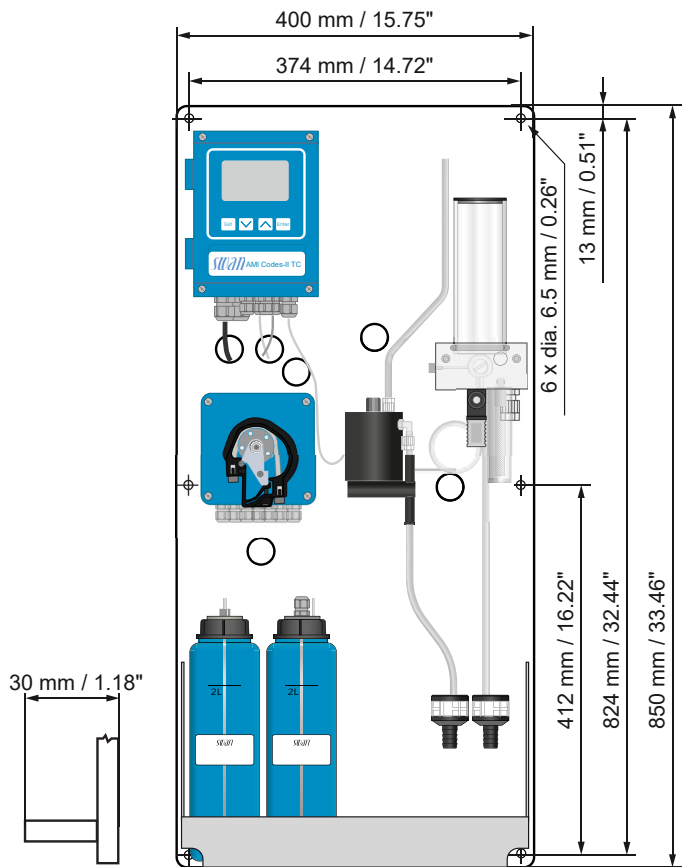

2.2. Instrument Overview

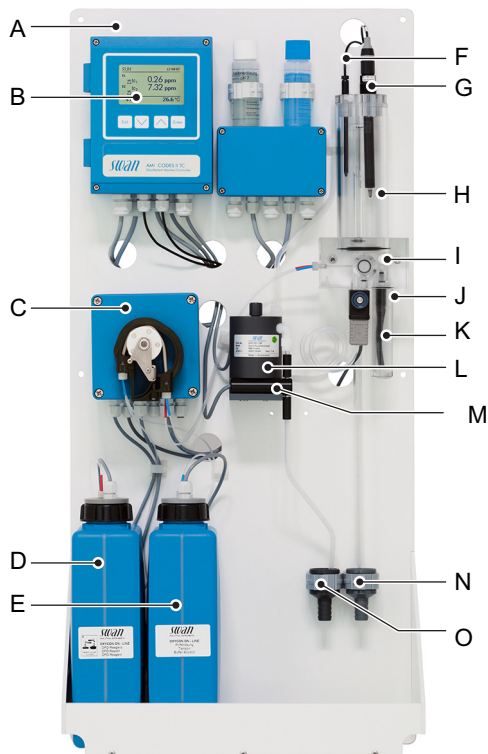

- | | |
|--|--------------------------------|
| A Panel | H Constant head |
| B Transmitter | I Flow regulating valve |
| C Peristaltic pump | J Sample inlet |
| D Reagent Oxycon on-line DPD | K Inlet filter |
| E Reagent Oxycon on-line Buffer & Reagent Oxycon on-line KI | L Photometer |
| F Temperature sensor | M Air bubble detector |
| G pH sensor | N Constant head drain |
| | O Photometer drain |

3. Installation

3.1. Installation Check List

On-site requirements	AC variant: 100–240 VAC ($\pm 10\%$), 50/60 Hz ($\pm 5\%$) DC variant: 10–36 VDC Power consumption: 35 VA maximum. Protective earth connection required. Sample line with sufficient sample flow and pressure (see Instrument Specification, p. 17).
Installation	Mount the instrument in vertical position. Display should be at eye-level. Mount the filter, filter vessel, and constant head cover. Connect the sample and waste line. See Connecting Sample and Waste, p. 21
Electrical wiring	Do not switch on the Instrument until all electrical connections are made. Connect all external devices like limit switches, current loops and pumps. Connect power cord. See Electrical Connections, p. 28 .
If ordered: Option pH	See Install the Option pH, p. 24 .
Reagents	Prepare reagents. See Refill or Replace Reagents, p. 48 . Insert the suction lances.
Power-up	Close the occlusion frames of the peristaltic pump. Turn on the sample flow and wait until the flow cell is completely filled. Switch on power. Start <Fill system> see Fill or Flush Reagent System, p. 40 .
Instrument setup	Program all parameters for external devices (interface, recorders, etc.). Program all parameters for instrument operation (limits, alarms, measuring interval).
Run-in period	Let the instrument run continuously for 1 h.
pH sensor calibration	If ordered: Calibrate pH sensor. See Standard pH, p. 54


Process calibration	Make 3 manual measurements. Use a high quality photometer, e.g. Chematest from Swan. Calculate the average value and compare this value with the measuring value of the AMI Monitor. If necessary, correct the value. The zero point is done automatically before each measurement.
----------------------------	---

3.2. Mounting of Instrument Panel

The first part of this chapter describes the preparing and placing of the instrument for use.

- ♦ The instrument must only be installed by trained personnel.
- ♦ Mount the instrument in vertical position.
- ♦ For ease of operation mount it so that the display is at eye level.
- ♦ For the installation a kit containing the following installation material is available:
 - 6 Screws 6x60 mm
 - 6 Dowels
 - 6 Washers 6.4/12 mm

Mounting requirements


The instrument is only intended for indoor installation.
For dimensions see  18.

3.3. Connecting Sample and Waste

3.3.1 FEP Tube at Sample Inlet

Use plastic tube (FEP, PA, or PE 6 x 8 mm) to connect the sample line.

Mounting of SERTO fitting



- A** Screw connection
- B** Compression ferrule
- C** Knurled nut
- D** Flexible tube

3.3.2 FEP Tube at Sample Outlet


WARNING



Risk of water pollution

The drain of the photometer outlet contains DPD.

- ♦ At no means recirculate it into the water system.

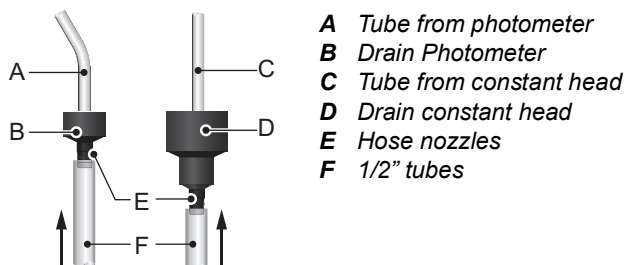

Connect the 1/2" tubes [F] to the hose nozzles [E] and place them into a pressure free drain with sufficient capacity.

3.4. Installation of Flow Cell


CAUTION



Fragile Part

Handle the constant head tube with care.

To avoid damage during the transport, the constant head tube [C] of the AMI Codes-II TC is not installed.

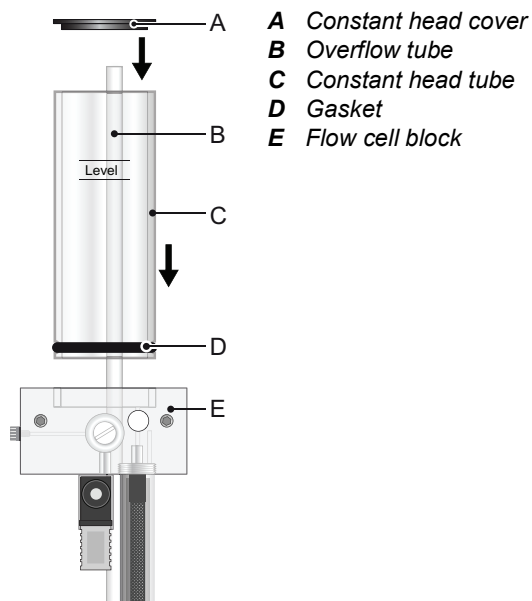


To install the constant head tube proceed as follows:

- 1 Unpack the constant head tube [C].
- 2 Push the constant head tube into the flow cell block [E].
- 3 Put the constant head cover [A] onto the constant head tube.
- 4 Check if the overflow tube [B] is aligned with the upper level mark.

3.5. Install the Option pH


3.5.1 pH as Option ex works

If the pH option was ordered with the AMI Codes-II TC, the pH sensor cable as well as the temperature sensor are already connected to the AMI transmitter.

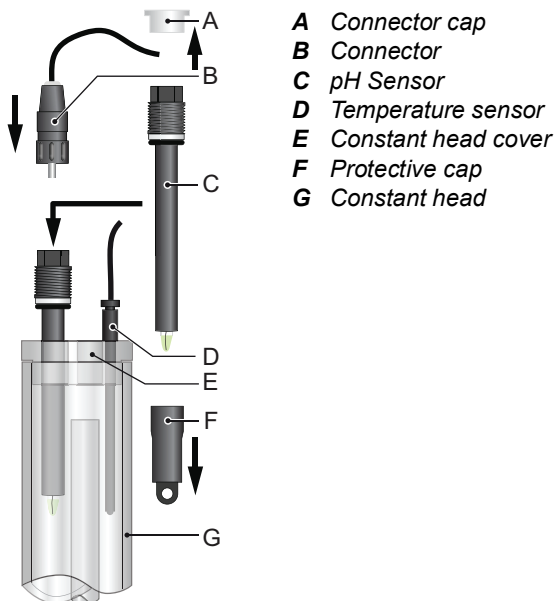

- 1 Carefully pull off the protective cap [F] from the pH sensor [C] by turning it clockwise.
- 2 Store the protective cap in a safe place.
- 3 Rinse the pH sensor tip with clean water.
- 4 Insert the pH sensor into one of the holes in the constant head cover [E].
- 5 Insert temperature sensor [D] into the small hole.
- 6 Remove the connector cap from the connector of the pH sensor. Store it in safe place.
- 7 Screw the connector [B] onto the pH sensor.

3.5.2 pH Option as Retrofit Kit

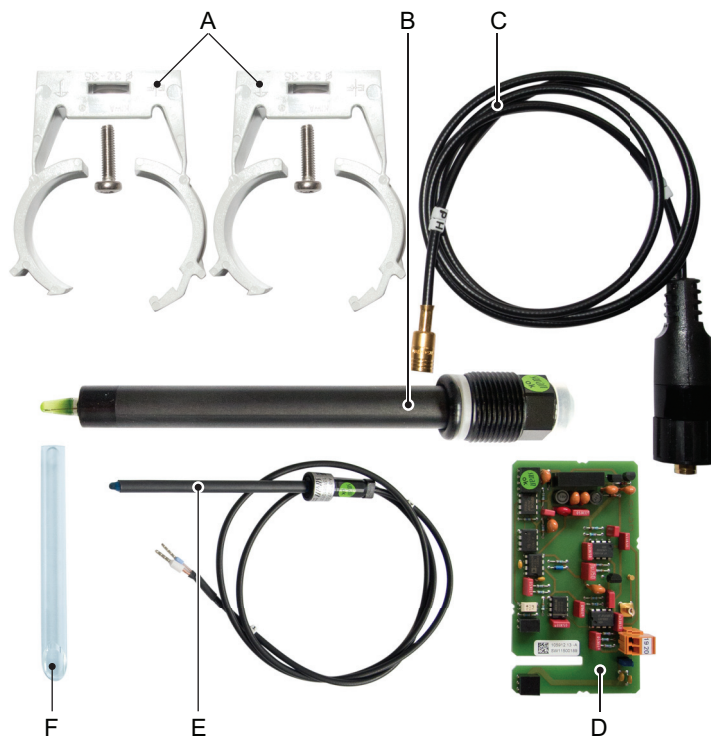

A 2 Clamps with screws

B pH sensor

C Sensor cable

D Frontend PCB

E Temperature sensor

F Short overflow tube




WARNING


Risk of electrical shock.

Do not perform any work on electrical components if the transmitter is switched on. Failure to follow safety instructions could result in serious injury or death.


- 1 Screw the clamps for calibration solution onto the panel. Use the already drilled holes [A].

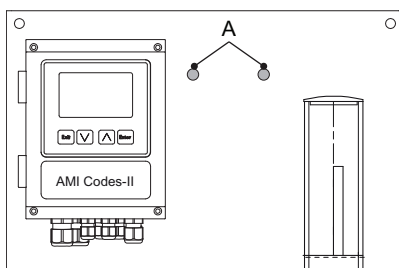

- 2 Stop sample flow. Wait until flow cell is empty.
- 3 Switch off the AMI transmitter (disconnect power).

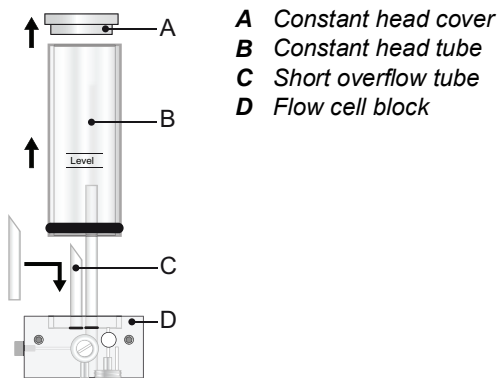

- 4 Remove the constant head cover [A] and the constant head tube [B] from the flow cell block [D].
- 5 Insert the short overflow tube [C] into the outlet hole leading to the photometer.
- 6 Install the constant head tube and the constant head cover.

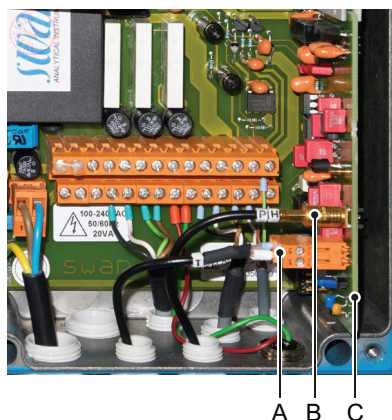

A Front end PCB
B pH sensor plug
C Temperature sensor plug

- 7** Open the cover of the AMI transmitter housing.
- 8** Install the front end PCB.
- 9** Feed the cable of the pH sensor through one of the cable glands (see [Cable thicknesses, p. 28](#)) into the AMI transmitter housing.
- 10** Connect it to the BNC socket.
- 11** Feed the cable of the Temperature sensor through one of the cable glands into the AMI transmitter housing.
- 12** Connect the temperature sensor cable to the plug as follows:
 - ♦ Terminal 19: line
 - ♦ Terminal 20: shield.
- 13** Close the cover of the AMI transmitter housing.
- 14** Turn on sample flow and wait until flow cell has been filled completely.
- 15** Switch power ON. The instrument automatically detects the front end PCB during start-up.

3.6. Electrical Connections



WARNING


Risk of electrical shock.

Do not perform any work on electrical components if the transmitter is switched on. Failure to follow safety instructions could result in serious injury or death.

- ♦ Always turn off power before manipulating electric parts.
- ♦ Grounding requirements: Only operate the instrument from a power outlet which has a ground connection.
- ♦ Make sure the power specification of the instrument corresponds to the power on site.

Cable thicknesses

In order to comply with IP66, use the following cable thicknesses

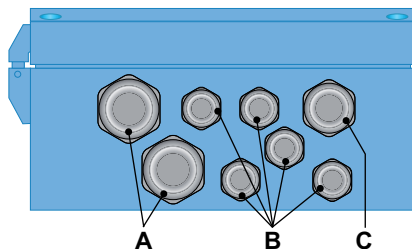

A PG 11 cable gland: cable \varnothing_{outer} 5–10 mm

B PG 7 cable gland: cable \varnothing_{outer} 3–6.5 mm

C PG 9 cable gland: cable \varnothing_{outer} 4–8 mm

Note: Protect unused cable glands

Wire

- ♦ For Power and Relays: Use max. 1.5 mm² / AWG 14 stranded wire with end sleeves.
- ♦ For Signal Outputs and Input: Use 0.25 mm² / AWG 23 stranded wire with end sleeves.



WARNING

External Voltage.

Externally supplied devices connected to relay 1 or 2 or to the alarm relay can cause electrical shocks

- ♦ Make sure that the devices connected to the following contacts are disconnected from the power before resuming installation.
 - relay 1
 - relay 2
 - alarm relay



WARNING

To prevent from electrical shock, do not connect the instrument to the power unless the ground wire (PE) is connected.




WARNING

The mains of the AMI Transmitter must be secured by a main switch and appropriate fuse or circuit breaker.



3.6.1 Connection Diagram

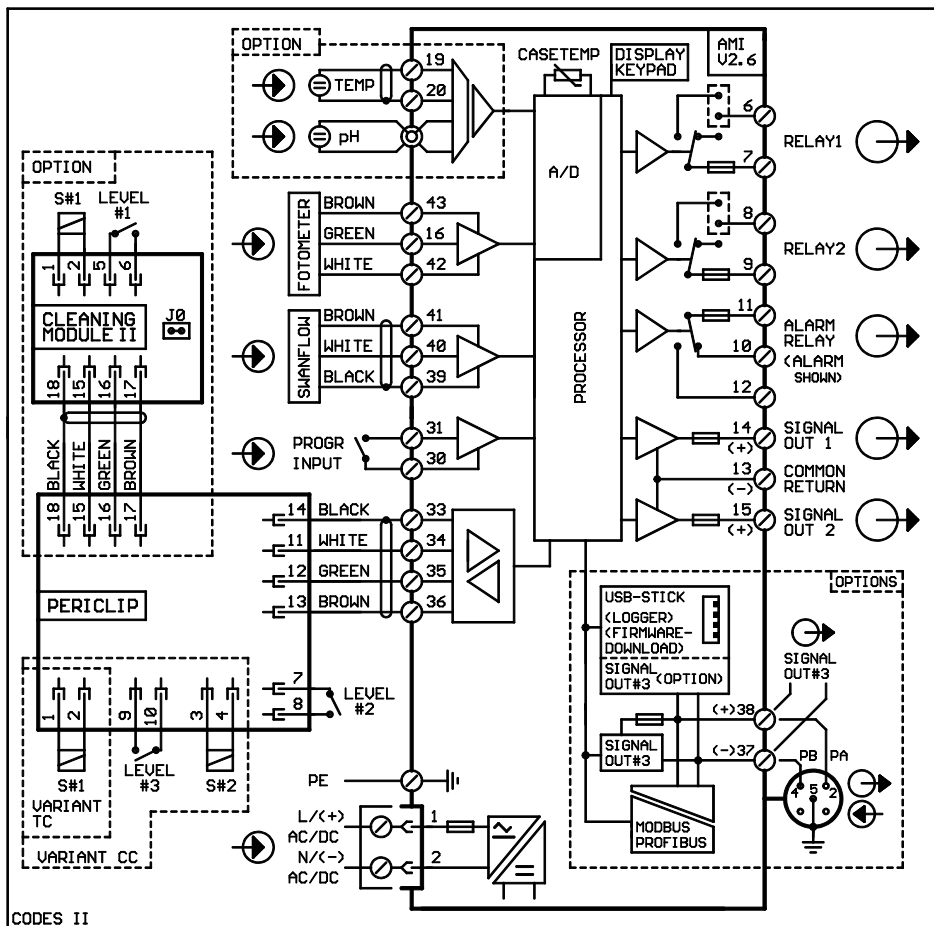

CAUTION



Use only the terminals shown in this diagram, and only for the mentioned purpose. Use of any other terminals will cause short circuits with possible corresponding consequences to material and personnel.


3.6.2 Power Supply



WARNING

Electrical shock hazard

Installation and maintenance of electrical parts must be performed by professionals. Always turn off power before manipulating electric parts.

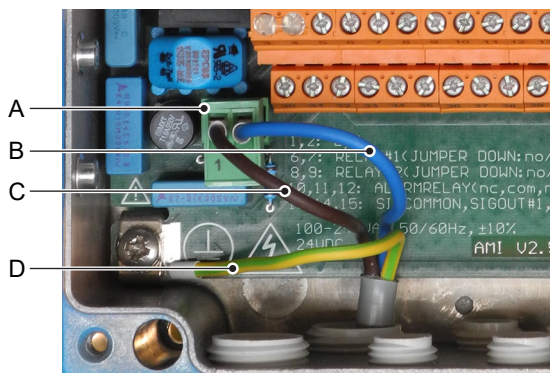

- A** Power supply connector
- B** Neutral conductor, Terminal 2
- C** Phase conductor, Terminal 1
- D** Protective earth PE

Note: The protective earth wire (Ground) has to be connected to the grounding terminal.

Installation requirements

The installation must meet the following requirements.

- ♦ Mains cable to comply with standards IEC 60227 or IEC 60245; flammable rating FV1
- ♦ Mains equipped with an external switch or circuit-breaker
 - near the instrument
 - easily accessible to the operator
 - marked as interrupter for AMI Codes-II TC

3.7. Input

Note: Use only potential-free (dry) contacts.
The total resistance (sum of cable resistance and resistance of the relay contact) must be less than 50 Ω.

Terminals 30 and 31
For programming see [Program List and Explanations](#), p. 81.

3.8. Relay Contacts

3.8.1 Alarm Relay

Note: Max. load 1 A / 250 VAC

Alarm output for system errors.
Error codes see [Troubleshooting](#), p. 66.

Note: With certain alarms and certain settings of the AMI transmitter the alarm relay does not switch. The error, however, is shown on the display.

	Terminals	Description	Relay connection
NC ¹⁾ Normally Closed	10/11	Active (opened) during normal operation. Inactive (closed) on error and loss of power.	
NO Normally Open	12/11	Active (closed) during normal operation. Inactive (opened) on error and loss of power.	


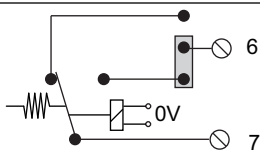

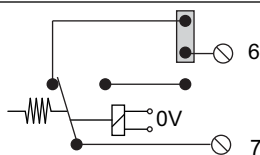
1) usual use


3.8.2 Relay 1 and 2

Note: Max. load 1 A/250 VAC

Relay 1 and 2 can be configured as normally open or as normally closed. Standard for both relays is normally open. To configure a Relay as normally closed, set the jumper in the upper position.

Note: Some error codes and the instrument status may influence the status of the relays described below.

Relay config.	Terminals	Jumper pos.	Description	Relay configuration
Normally Open	6/7: Relay 1 8/9: Relay 2		Inactive (opened) during normal operation and loss of power. Active (closed) when a programmed function is executed.	
Normally Closed	6/7: Relay 1 8/9: Relay 2		Inactive (closed) during normal operation and loss of power. Active (opened) when a programmed function is executed.	

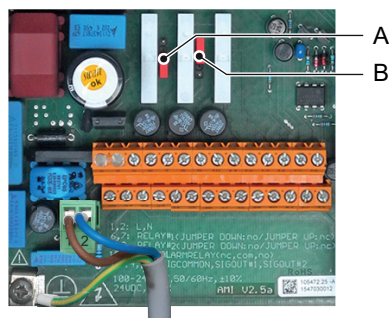

A Jumper set as normally open (standard setting)

B Jumper set as normally closed

For programming see [Program List and Explanations, p. 81](#), Menu Installation



CAUTION

Risk of damage of the relays in the AMI Transmitter due to heavy inductive load.


Heavy inductive or directly controlled loads (solenoid valves, dosing pumps) may destroy the relay contacts.

- ♦ To switch inductive loads > 0.1 A use an AMI relay box available as an option or suitable external power relays.

Inductive load

Small inductive loads (max 0.1 A) as for example the coil of a power relay can be switched directly. To avoid noise voltage in the AMI Transmitter it is mandatory to connect a snubber circuit in parallel to the load.


A snubber circuit is not necessary if an AMI relaybox is used.

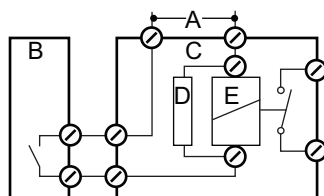

- A** AC or DC power supply
- B** AMI Transmitter
- C** External power relay
- D** Snubber
- E** Power relay coil

Resistive load


Resistive loads (max. 1 A) and control signals for PLC, impulse pumps and so on can be connected without further measures



- A** AMI Transmitter
- B** PLC or controlled pulse pump
- C** Logic

Actuators

Actuators, like motor valves, are using both relays: One relay contact is used for opening, the other for closing the valve, i.e. with the 2 relay contacts available, only one motor valve can be controlled. Motors with loads bigger than 0.1 A must be controlled via external power relays or an AMI relay box.

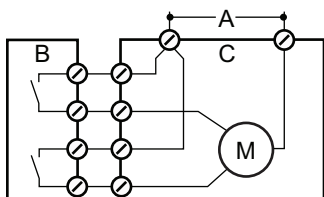

- A** AC or DC power supply
- B** AMI Transmitter
- C** Actuator

3.9. Signal Outputs

3.9.1 Signal Output 1 and 2 (current outputs)

Note: Max. burden $510\ \Omega$


If signals are sent to two different receivers, use signal isolator (loop isolator).

Signal output 1: Terminals 14 (+) and 13 (-)

Signal output 2: Terminals 15 (+) and 13 (-)

For programming see [Program List and Explanations](#), p. 81, Menu Installation

3.10. Interface Options

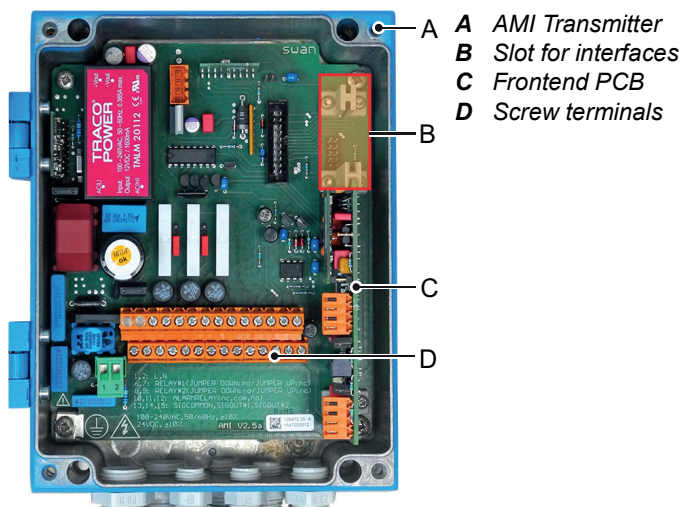

The slot for interfaces can be used to expand the functionality of the AMI instrument with either:


- ♦ Third signal output
- ♦ a Profibus or Modbus connection
- ♦ a HART connection
- ♦ a USB Interface

3.10.1 Signal Output 3

Terminals 38 (+) and 37 (-).

Requires the additional board for the third signal output 0/4–20 mA. The third signal output can be operated as a current source or as a current sink (switchable via switch [A]). For detailed information see the corresponding installation instruction.

Note: Max. burden 510 Ω .

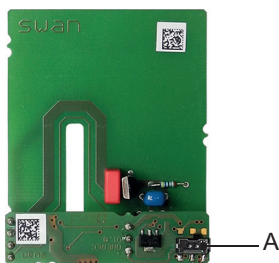

Third signal output 0/4 - 20 mA PCB


A Operating mode selector switch

3.10.2 Profibus, Modbus Interface

Terminal 37 PB, Terminal 38 PA

To connect several instruments by means of a network or to configure a PROFIBUS DP connection, consult the PROFIBUS manual. Use appropriate network cable.

Note: The switch must be ON, if only one instrument is installed, or on the last instrument in the bus.

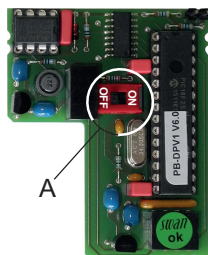


Profibus, Modbus Interface PCB (RS 485)

A On - OFF switch

3.10.3 HART Interface

Terminals 38 (+) and 37 (-).

The HART interface PCB allows for communication via the HART protocol. For detailed information, consult the HART manual.

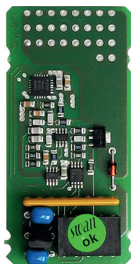


HART Interface PCB

3.10.4 USB Interface

The USB Interface is used to store Logger data and for Firmware upload. For detailed information see the corresponding installation instruction.

The optional third signal output 0/4 – 20 mA PCB [B] can be plugged onto the USB interface and used in parallel.

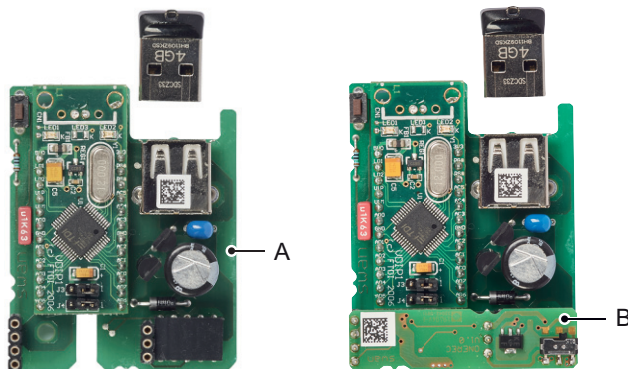

USB Interface

A USB interface PCB

B Third signal output 0/4 - 20 mA PCB

4. Instrument Setup


4.1. Prepare Reagents

- 1 Prepare reagents. See [Refill or replace Reagents, p. 48](#).
- 2 Insert the suction lances into the canisters.

4.2. Peristaltic Pump

The instrument is delivered with opened occlusion frames.

- 1 Activate the peristaltic pump tubes by closing the occlusion frames [B].

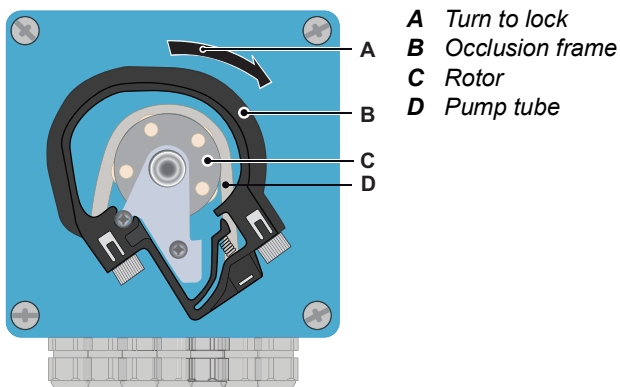

4.3. Establish Sample Flow




WARNING

Water pollution

The drain of the photometer outlet contains DPD.

- ♦ At no means recirculate it into the water system.

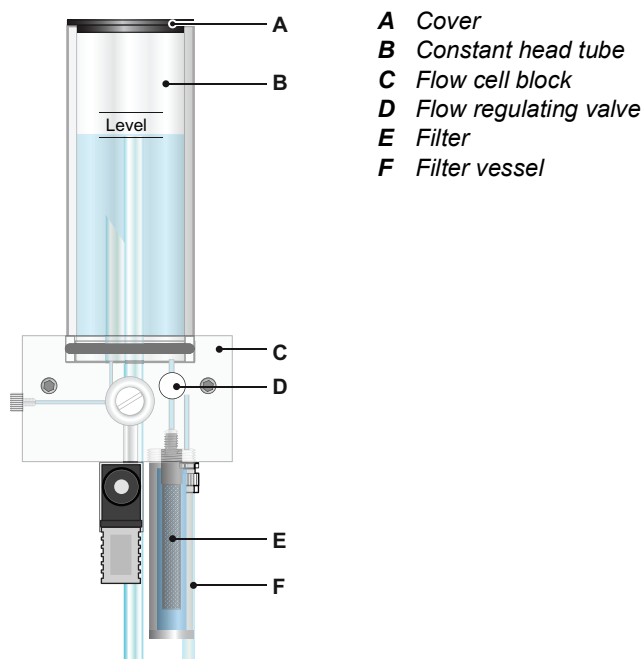


- 1 Open the flow regulating valve (D) and wait until the flow cell is completely filled.
- 2 Switch on power.
- 3 Adjust the sample flow so that always a small part of the sample drains off through the overflow tube.
- 4 Start <Fill system>, see [Fill or Flush Reagent System](#), p. 40.


4.4. Fill or Flush Reagent System

Fill or flush the reagent tubing:


- ♦ upon the initial instrument setup,
- ♦ after refilling the reagent canisters,
- ♦ before a system shut-down to flush the system with demineralized water until no more reagent is left in the system.

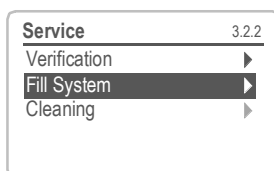

Navigate to menu < Maintenance / Service/ Fill system>. Press [Enter].

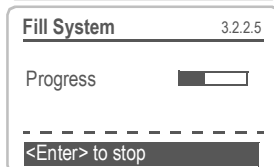

The peristaltic pump is activated for 1.5 minutes.

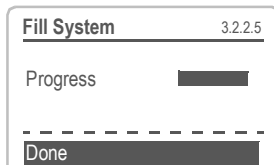

Press [Exit] 4 x to go back to the operating mode.

- 1 Check tubing and flow cell for leaks and repair if necessary.
- 2 Let the instrument run continuously for 1 hour.

4.5. Programming

Programming

Program all parameters for external devices (interface, recorders, etc.)

Program all parameters for instrument operation (disinfectant, limits, alarms).

Program the DPD value of the Verikit in menu <Installation/Sensors/Ref. Verification>.

If pH option is installed, program the two buffers you want to use for calibration in menu <Installation/Sensors/Standards>.

See [Program List and Explanations, p. 81](#).

4.6. Calibration

- 1** Calibrate pH sensor (if option pH is installed).
See [Standard pH, p. 54](#).
- 2** Perform process calibration.
See [Process Calibration of tc 2, p. 52](#)

**If ordered:
Calibration of
pH sensor**

The instrument should be operating for 1h before performing a pH calibration.

Process DIS

Let the instrument run for 1 h.


Use CHEMATEST (or equivalent photometer) to determine the sample disinfectant concentration. Take the sample directly from the flow cell. Determine the sample disinfectant value by 3 manual DPD measurements. Calculate the average value. Compare this value to the value, indicated by the AMI.

Keep in mind the accuracy of your manual measurement. Only correct the instrument if the difference is significant.

Perform process DIS if necessary. See chapter [Calibration, p. 52](#) for details.


5. Operation

5.1. Keys

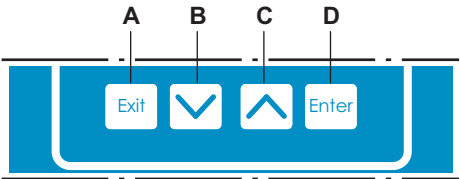


- A** to exit a menu or command (rejecting any changes) to move back to the previous menu level
- B** to move DOWN in a menu list and to decrease digits
- C** to move UP in a menu list and to increase digits
- D** to open a selected sub-menu to accept an entry

Program Access, Exit

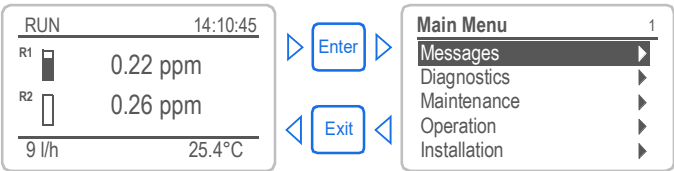

5.2. Display

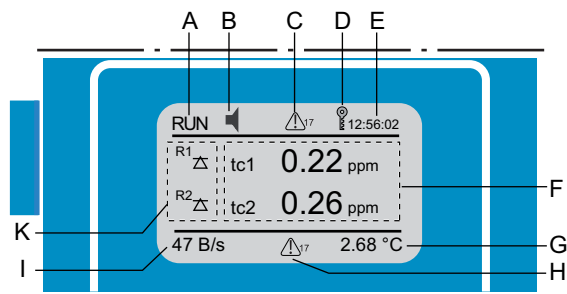

- A** RUN normal operation
 HOLD input closed or cal delay: Instrument on hold (shows status of signal outputs).
 OFF input closed: control/limit is interrupted (shows status of signal outputs).
- B** ERROR Error Fatal Error
- C** Reagent low, indicates remaining reagents in % (17% = 340 ml)
- D** Keys locked, transmitter control via Profibus
- E** Time
- F** Process values
- G** Sample Temperature
- H** Cleaning solution low, indicates remaining cleaning solution in %
- I** Sample flow in B/s
- K** Relay status

Relay status, symbols

- upper/lower limit not yet reached
 upper/lower limit reached
 control upw./downw. no action
 control upw./downw. active, dark bar indicates control intensity
 motor valve closed
 motor valve: open, dark bar indicates approx. position
 timer
 timer: timing active (hand rotating)

5.3. Software Structure

Main Menu	1
Messages	▶
Diagnostics	▶
Maintenance	▶
Operation	▶
Installation	▶

Messages	1.1
Pending Errors	▶
Maintenance List	▶
Message List	▶

Menu Messages 1
Reveals pending errors as well as an event history (time and state of events that have occurred at an earlier point of time).
It contains user relevant data.

Diagnostics	2.1
Identification	▶
Sensors	▶
Sample	▶
I/O State	▶
Interface	▶

Menu Diagnostics 2
Provides user relevant instrument and sample data.

Maintenance	3.1
Calibration	▶
Service	▶
Simulation	▶
Set Time	23.09.06 16:30:00

Menu Maintenance 3
For instrument calibration, relay and signal output simulation, and to set the instrument time.
It is used by the service personnel.

Operation	4.1
Sensors	▶
Relay Contacts	▶
Logger	▶

Menu Operation 4
User relevant parameters that might need to be modified during daily routine. Normally password protected and used by the process-operator.
Subset of menu 5 - Installation, but process-related.

Installation	5.1
Sensors	▶
Signal Outputs	▶
Relay Contacts	▶
Miscellaneous	▶
Interface	▶

Menu Installation 5
For initial instrument set up by SWAN authorized person, to set all instrument parameters. Can be protected by means of password.

5.4. Changing Parameters and values

Changing parameters

The following example shows how to change the logger interval:

Logger 4.4.1
Log interval 30 min
Clear logger no

Logger 4.1.3
Log inter Interval.
Clear log 5 min
10 min
30 min
1 Hour

Logger 4.1.3
Log interval 10 min
Clear logger no

Logger 4.1.3
Log inter Save ?
Clear log Yes
no

- 1 Select the parameter you want to change.
- 2 Press [Enter].
- 3 Press [] or [] key to highlight the required parameter.
- 4 Press [Enter] to confirm the selection or [Exit] to keep the previous parameter).

⇒ The selected parameter is highlighted but not saved yet.

- 5 Press [Exit].

⇒ Yes is highlighted.

- 6 Press [Enter] to save the new parameter.
⇒ The system reboots, the new parameter is set.

Changing values

Total chlorine 1 5.3.1.1.1
Alarm High 5.00 ppm
Alarm Low 0.00 ppm
Hysteresis 1.00 ppm
Delay 5 Sec

Total chlorine 1 5.3.1.1.1
Alarm High 12.00 ppm
Alarm Low 0.00 ppm
Hysteresis 1.00 ppm
Delay 5 Sec

- 1 Select the value you want to change.
- 2 Press [Enter].
- 3 Set required value with [] or [] key.
- 4 Press [Enter] to confirm the new value.
- 5 Press [Exit].
⇒ Yes is highlighted.
- 6 Press [Enter] to save the new value.

6. Maintenance

6.1. Maintenance Schedule

Daily (dirty water) up to every 2 weeks (clean water)	Check sample supply for dirt. Clean all filters and strainers, if necessary. Clean AMI Codes protection filter, if necessary. Check sample flow (see also Troubleshooting, p. 66).
Every 4–6 weeks	Clean reagent canisters and prepare new reagents. Let instrument run for 1 h. Make 3 manual measurements. Compare average value to displayed value. If necessary, perform process calibration.
Monthly	Recommendation: Check photometer with verification kit Verification, p. 51 .
Yearly	Exchange reagent pump tubes.
By occurrence	E020, FOME dirty: Cleaning the Photometer, p. 56 . E065, Reagents low: Refill or Replace Reagents, p. 48 . E022, Reagent empty: Refill or Replace Reagents, p. 48 .

If pH option is installed:


Weekly	Perform a process calibration, see Process pH, p. 53 .
Every 2 months	Perform a standard calibration, see Standard pH, p. 54 .

6.2. Stop of Operation for Maintenance

- 1 Put the suction lances into a bucket with clean water.
- 2 Start <Fill system>.
⇒ *The reagent tubes are flushed with water.*
- 3 Remove the suction lances from the water.
- 4 Start <Fill system> again.
⇒ *The water will be pumped out of the reagent tubes.*
- 5 Stop sample flow.
- 6 Wait until the flow cell is empty.
- 7 Shut off power of the instrument.

If pH option is installed:

- 8 Remove the pH sensor [A] from the flow cell.
- 9 Fill the protective cap [B] with water.
- 10 Put the protective cap onto the sensor tip.

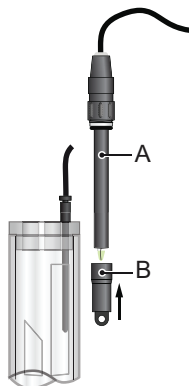

A pH sensor
B Protective cap

6.3. Refill or Replace Reagents

The liquid level in canister 2 is monitored. The following messages are displayed:

canister almost empty	Maintenance E065 - Reagents low and the remaining reagent volume in % (starting at 17 % = 340 ml).
canister empty	Error E022 - Reagent empty

Note: Before refilling the reagents, rinse the canisters with demineralized water.




CAUTION

Chemical exposure hazard

- ♦ Observe the necessary security measures when manipulating dangerous chemicals.
- ♦ Read the Material Safety Data Sheets carefully!

Canister set up

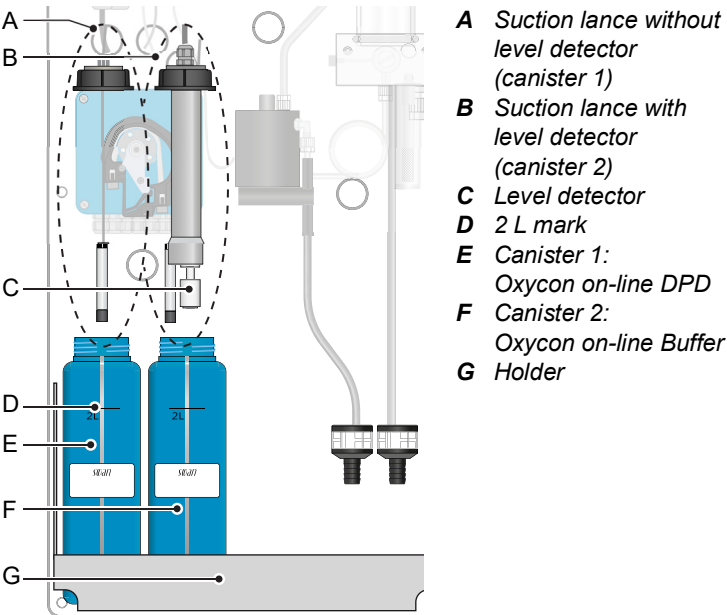

Reagent consumption

The reagent consumption depends on the selected measuring interval and on the selected operating mode (measuring range: Standard / Extended). Below you will find some examples:

Measuring interval	Duration per canister (measuring range: standard)	Duration per canister (measuring range: extended)
3 minutes	13–19 days	8–11 days
5 minutes	22–32 days	13–19 days
10 minutes	44–63 days	26–38 days
20 minutes	88–126 days	53–76 days

The provided reagent set is sufficient for 8 canister fillings.

Contents of the reagent sets

A-85.410.120:

- ♦ Oxycon On-Line DPD (8 bottles)
- ♦ Oxycon On-Line Buffer (8 bags)

A-85.419.200:

- ♦ Oxycon On-Line KI (8 bags)

Personal protective equipment:



Oxycon On-Line DPD:

H314: Causes severe skin burns and eye damage.

H318: Causes serious eye damage.




Oxycon On-Line KI:

H372: Causes damage to organs through prolonged or repeated exposure.




6.3.1 Reagents for Measuring Total Chlorine

Prepare Oxycon On-line DPD

- 1 Rinse the canister [E] labelled OXYCON ON LINE DPD-Reagent with demineralized water.
- 2 Fill the canister up to the 2 liter mark with demineralized water.
- 3 Slowly pour the content of one bottle of concentrate Oxycon On-line DPD (50 ml) into the canister.
 *Avoid splashing!*
- 4 Close the canister with the screw cover and tighten it well.
- 5 Mix the demineralized water and the reagents well.
- 6 Put the canister [E] into the holder [G].
- 7 Remove the screw cover, insert suction lance [A] and tighten the screw cover.

Prepare Oxycon On-line Buffer & KI

- 1 Rinse the canister [F] labelled "OXYCON ON LINE Buffer" solution with demineralized water.
- 2 Fill the canister up to the 2 liter mark with demineralized water.
- 3 Slowly pour the content of one bag of Oxycon On-line Buffer into the canister.
 *Avoid splashing!*
- 4 Add the content of one bag Oxycon On-line KI to the same canister.
- 5 Close the canister with the screw cover and tighten it well.
- 6 Mix the demineralized water and the reagents well.
- 7 Put the canister [F] into the holder [G].
- 8 Remove the screw cover and insert suction lance [B]. Tighten the screw cover.
- 9 Fill reagent system. See [Fill or Flush Reagent System, p. 40](#).

6.4. Verification

The "Verification kit for AMI Photometer" is available as an accessory. An optical window with a precisely determined absorbance value is placed into the light beam of the photometer. The actual measured absorbance will be compared to the reference value labeled on each kit.



Set reference value: Prior to performing the verification the DPD reference value, e.g. 0.255, needs to be set in menu 5.1.4
<Installation>\<Sensors>\<Ref. Verification>.

Verification procedure: Basically follow the dialog in menu 3.2.1
<Maintenance>\<Service>\<Verification>.

Note: Start any time, if a measuring cycle is in progress wait for next prompt.

- 1 Stop sample flow by closing regulating valve. Wait for next prompt: Constant head will be drained and an automatic zero will be defined.
- 2 Open cuvette of the photometer and insert the verification filter. Press [Enter] to continue.
- 3 Align the triangle shape either to the front or backside and adjust for minimal absorbance (see AMI Display).
- 4 Press [Enter] to save the verification measurement. The verification is successful if the difference is within the limits. Press [Enter] to continue.
- 5 Remove filter, close cuvette and open regulating valve. [Enter] to finish and [Exit] to the main display.

Verification history: Can be reviewed in menu 2.2.1.5
<Diagnostics>\<Sensors>\<Photometer>\<Ver. History>


6.5. Calibration

Process
Calibration
of tc 2

Note: Perform process calibration for total chlorine only if:

- the sample concentration is close to the desired process value (stable value)
- you are sure that the reagents are mixed completely and correctly
- if the difference to the manual measurement is significant.
- Keep in mind the accuracy of your manual measurement.

Use CHEMATEST (or equivalent photometer) to determine the sample disinfectant concentration. Determine the sample disinfectant value by 3 manual DPD measurements. Calculate the average value. Compare this value to the value indicated by the AMI transmitter.

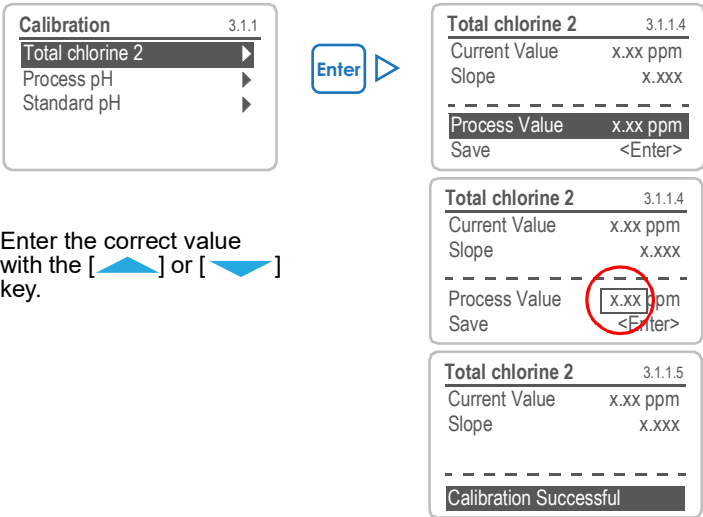

Enter the correct value
with the [▲] or [▼]
key.


Press 3 x [Exit]

Possible error message see [Calibration Errors](#), p. 67.

Zero A zero is automatically done before each measurement.

Process pH Use a Chematest photometer (or equivalent) to determine the sample pH value.

Note: Make sure your reference instrument is calibrated correctly!

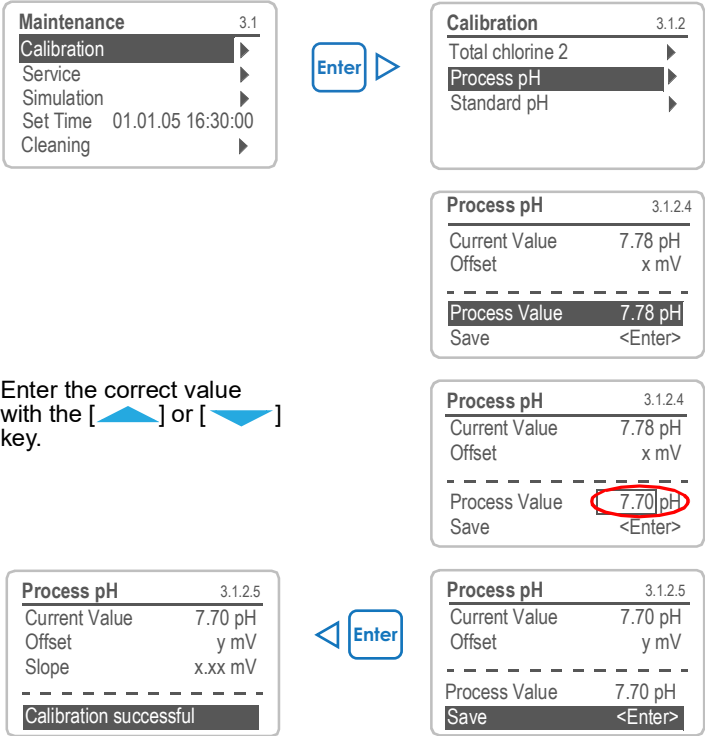

Enter the correct value with the [▲] or [▼] key.

Possible error message see [Calibration Errors, p. 67](#).

Standard pH

Maintenance	3.1
Calibration	▶
Simulation	▶
Set Time 01.06.04 16:30:00	
Fill System	▶
Cleaning	▶

Calibration	3.1.3
Total chlorine 2	▶
Process pH	▶
Standard pH	▶

- 1 Navigate to menu <Maintenance>/<Calibration>.
- 2 Press [Enter].
- 3 Remove the pH sensor from the flow cell.
- 4 Follow the instructions on the display.


Display instructions

- 1 Rinse and dry the pH sensor and put it into standard 1
- 2 Standard 1, current value (Progress is shown).
- 3 Rinse and dry the pH sensor and put it in standard 2
- 4 Standard 2, current value (Progress is shown)
- 5 Rinse and dry the pH sensor and put it into the flow cell

Possible error message see [Calibration Errors, p. 67](#)

6.6. Cleaning the protective Filter

Switch off the instrument according to instructions in [Stop of Operation for Maintenance](#), p. 47.

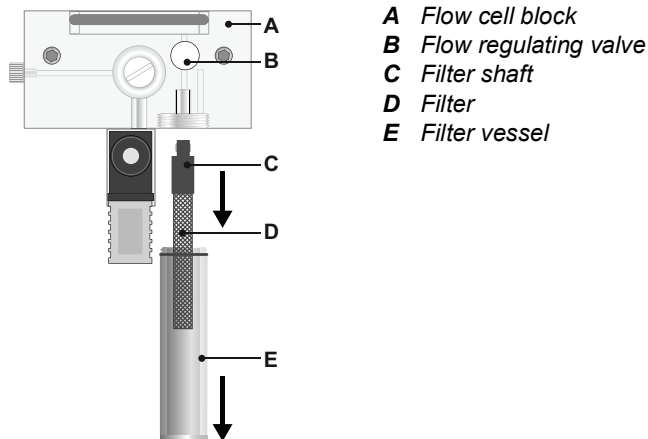

Normally the filter in your sample supply line will retain most debris. If the filter shows deposits, proceed as follows:

- 1 Close the main tap of the sample inlet.
- 2 Close the flow regulating valve [B].
- 3 Unscrew the filter vessel [E] from the flow cell block [A].
- 4 Hold the filter [D] on the shaft [C] and unscrew it from the filter vessel.
- 5 Backwash the filter under pressure of tap water.
- 6 Clean the outside of the filter.
- 7 Install the filter and the filter vessel again.
- 8 Open the flow regulating valve.
- 9 Adjust sample flow with the regulating valve.


6.7. Cleaning the Photometer

Clean the photometer after indication by alarm (E020, FOME dirty). Switch off the instrument according to instructions in [Stop of Operation for Maintenance](#), p. 47.


Material

Small brush.

Procedure

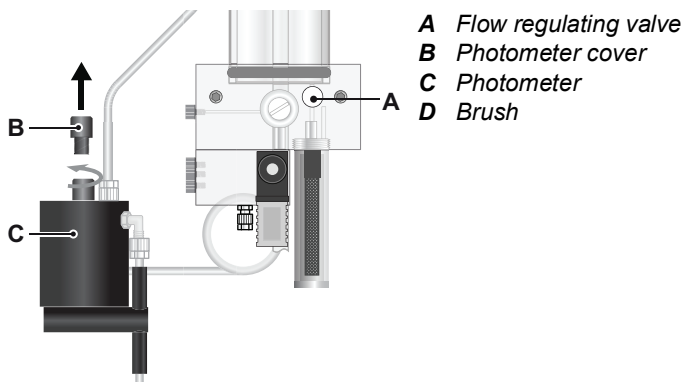

- 1 Close the flow regulating valve [A].
- 2 Wait until the sample flow through the photometer has stopped.
- 3 Unscrew the cover [B] from the photometer [C].

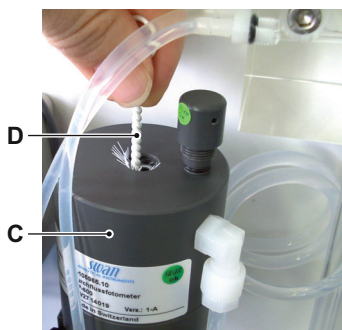

- 4 Clean the Photometer with a small brush [D].
- 5 Screw the cover to the photometer.
- 6 Open the flow regulating valve.

6.8. Cleaning the Flow Cell



CAUTION


Acrylic glass parts are fragile and scratch-sensitive.

Possible damage of acrylic glass parts due to scrubbing materials.

- ♦ Never use organic solvents or scrubbing materials to clean acrylic glass parts.
- ♦ Use soft detergent and rinse well. Eliminate lime deposits with a common household deliming agent in standard concentration.
- ♦ Do not drop the constant head tube


6.8.1 Disassemble the Flow Cell

The flow cell can be disassembled easily. Before disassembling the flow cell, switch off the instrument according to instructions in [Stop of Operation for Maintenance, p. 47](#).

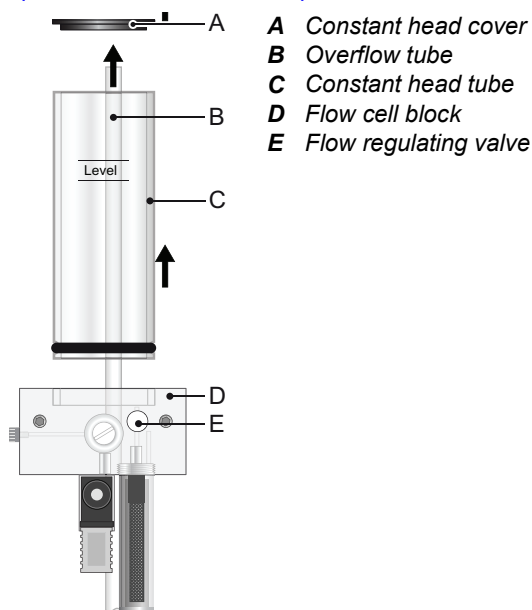

- Cleaning**
- 1 Switch off the instrument according to instructions in [Stop of Operation for Maintenance, p. 47](#)
 - 2 Remove the constant head cover [A].
 - 3 Pull the overflow tube [B] out of the flow cell block [D]
 - 4 Remove the constant head tube [C] from the flow cell block.
 - 5 Clean all acrylic parts with a soft brush (bottle cleaner) and soapy water.
 - 6 Remove lime deposits with a common household deliming agent with standard concentrations.


6.8.2 Assemble the Flow Cell

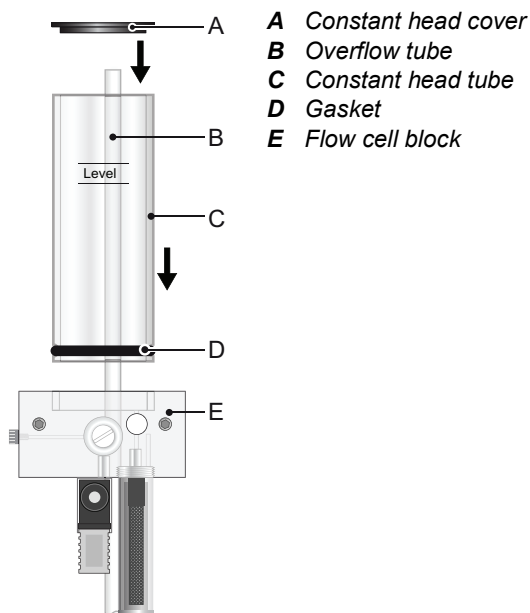

- 1 Replace the gasket [D] before reassembling the flow cell.
Note: A film of teflon paste (e.g. Fomblin from Solvay Solexis) on the gaskets improves tightness and life time.
- 2 Push the overflow tube [B] through the flow cell block as far as it reaches the drain.

- 3 Install the constant head tube [C] onto the flow cell block.
- 4 Put the cover onto the constant head tube.
- 5 Align the overflow tube with the upper level mark.

6.9. Maintenance of pH sensor

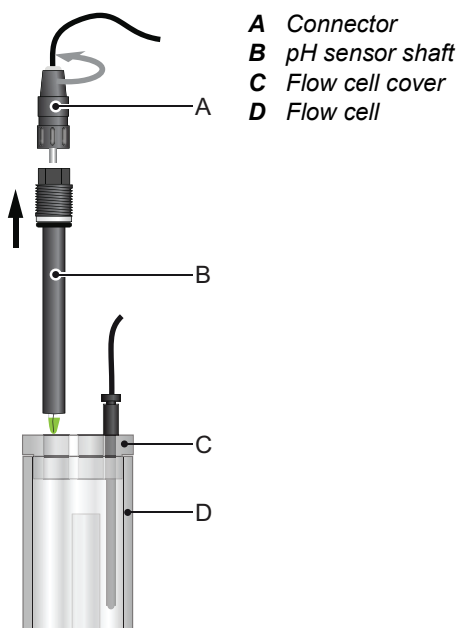

Clean pH sensor

- 1 Remove the pH sensor [B] from the flow cell.
- 2 Unscrew and remove the connector [A] from the pH sensor.
⚠ Prevent the connectors from getting wet
- 3 If necessary wipe the pH sensor shaft and the green tip cautiously with a soft, clean, and damp paper tissue.
- 4 Remove grease with a tissue moistened with alcohol.
- 5 If the sensor is very dirty put it into 1% diluted hydrochloric acid for 1 min.
⚠ CAUTION! hydrochloric acid is corrosive!
- 6 Rinse the pH sensor with clean water.

6.10. Tube Replacement

6.10.1 Replace the Pump Tubes

The pump tube [D] of the peristaltic pump is exposed to a minimal wear. It is therefore recommended to exchange the pump tube annually.




CAUTION

Pollution of reagents possible.

If the occlusion frames are opened during operation, already mixed reagents will flow back into the reagent canisters and pollute the reagents.

- ♦ Never open the occlusion frames if the instrument is in operation.
- ♦ Proceed according to [Stop of Operation for Maintenance, p. 47](#) before opening the occlusion frames.


Overview

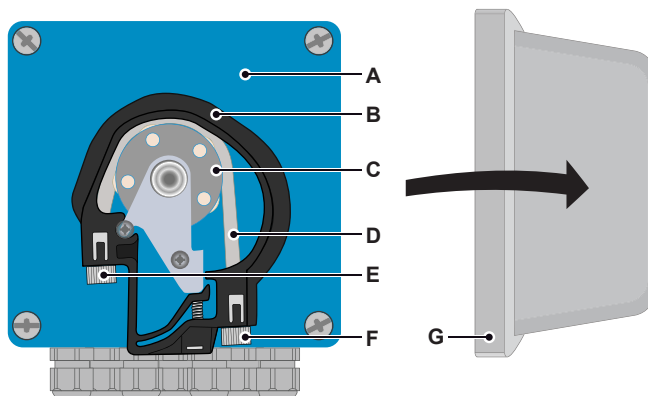

- | | |
|---------------------------------|-------------------------|
| A Pump housing | E Pump inlet |
| B Occlusion frame closed | F Pump outlet |
| C Rotor | G Protection cap |
| D Pump tube | |

Dismount pump tubes

The pump tube can easily be dismounted and mounted. Proceed as follows:

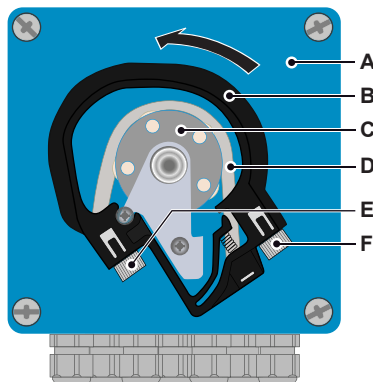

- A** Pump housing
- B** Occlusion frame open
- C** Rotor
- D** Pump tube
- E** Pump inlet
- F** Pump outlet


- 1 Switch off the instrument according to instructions in [Stop of Operation for Maintenance, p. 47](#).
- 2 Remove the protection cap.
- 3 Open the occlusion frames [B] by turning them counter-clockwise.
- 4 Remove the pump tubes [D] from the rotor [C] by pulling the complete occlusion frames [B] out of the holder.

Install new pump tubes

- 1 Disconnect the reagent tubes from the old pump tubes and connect them to the new pump tubes
- 2 Install the new pump tubes by pushing the occlusion frames onto the holder.
- 3 Lock the occlusion frames. Check that the occlusion frames and the tubes are aligned perpendicular to the axis of the rotor.
- 4 Insert the suction lances into the corresponding containers.
- 5 Start the <Fill system> function.

6.10.2 Replace the Reagent Tubes

Tube
numbering

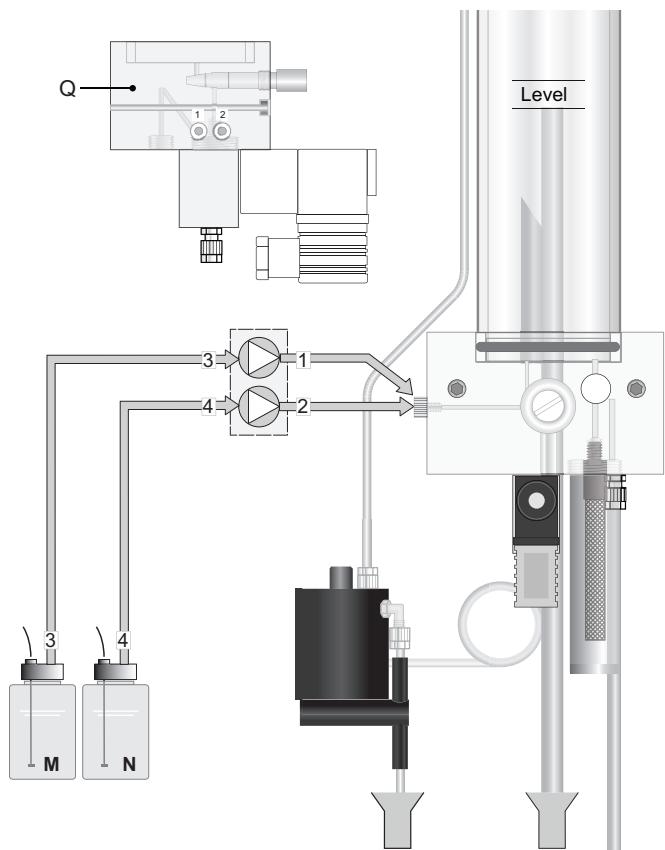

No.	from	to
1	Pump outlet rear frame	Flow cell block, connection 1 <i>see Flow cell block side view Q</i>
2	Pump outlet front frame	Flow cell block, connection 2 <i>see Flow cell block side view Q</i>
3	Reagent canister (M) Oxycon on-line DPD	Pump inlet rear frame
4	Reagent canister (N) Oxycon on-line Buffer	Pump inlet front frame


6.11. Cleaning the solenoid valve

Disassemble the solenoid valve


The solenoid valves are mounted at the bottom of the flow cell block. The solenoid valve should be disassembled if it does not switch any more or if it is clogged.

- 1 Switch off the instrument according to instructions in [Stop of Operation for Maintenance, p. 47](#)


- 2 Loosen the nut (A).

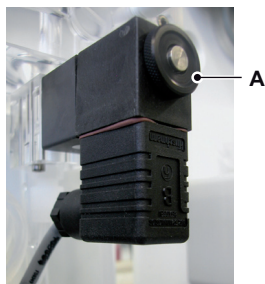


- 3 Remove the solenoid coil (B) from the valve body (C).

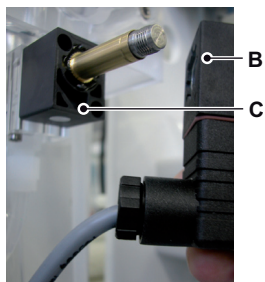


- 4 Loosen the fixing screws of the valve body with a 2.5 mm Allen key (D).

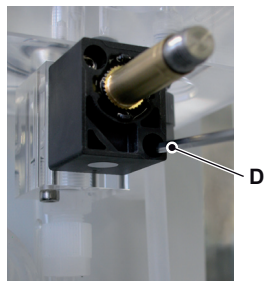

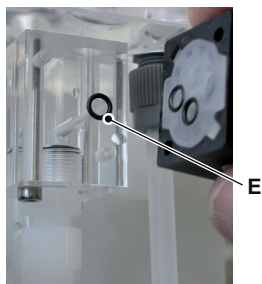


Note: The O-rings inside the valve body may stick on the flow cell and fall down if the valve body is removed.

- 5 Remove the valve body from the flow cell.

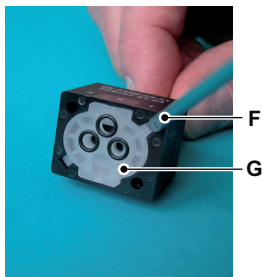

- 6 Remove the base plate (G) with a screw driver size 0 (F).

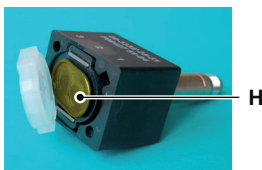

⇒ The membrane (H) is now visible.

- 7 Clean base plate (G) and membrane (H) with clean water.

Assemble Assemble the solenoid valve in reverse order.

6.12. Longer Stop of Operation

- 1 Put the suction lances into a bucket with clean water.
- 2 Start <Fill system>.
⇒ *The reagent tubes are flushed with water.*
- 3 Remove the suction lance from the water.
- 4 Start <Fill system> again.
⇒ *The water will be pumped out of the reagent tubes.*
- 5 Stop sample flow.
- 6 Wait until level in flow cell has fallen to the shorter tube inside the cell.
- 7 Shut off power of the instrument.
- 8 Empty the flow cell completely.
- 9 Open the occlusion frames of the peristaltic pump, see [Replace the Pump Tubes, p. 60](#).

If option pH is installed

- 10 Unscrew and remove the connector from the pH sensor.
- 11 Put the connector cap onto the sensor connector.
- 12 Fill 3.5 molar KCl (if not available: water) into the rubber cap.
- 13 Remove the pH sensor from the flow cell and place the rubber cap on the tip of the sensor.



CAUTION

Damage of pH sensor

Wrong storage will damage the pH sensor.

- ♦ Never store the pH sensor dry.
- ♦ Store the pH sensor with tip pointing downwards in a frost-protected room.

7. Troubleshooting

This chapter provides some hints to make troubleshooting easier. For any detailed information how to handle or clean parts please see [Maintenance, p. 46](#). For any detailed information how to program the instrument please see [Program List and Explanations, p. 81](#).

7.1. General Instructions

***Note:** The sample for the manual measurement (with DPD) must be taken directly from the flow cell.
If you need further help please contact your dealer. Note serial number of instrument and all diagnostic values before doing so.*

Diagnostic values	Zero photometry: 10'000–16'000 Hz (mostly near 16 000 Hz) Slope photometry: 0.8–1.2 pH offset: New pH sensor: near 0, old pH sensor > ± 50 mV pH slope: typically: 55–62 mV/pH unit.	
Frequently asked questions	Problem	Possible Reasons
	Unstable values	<ul style="list-style-type: none">♦ Sample taken too close to feeding line♦ Sample flow too irregular or too low
	Codes display higher or lower than manual measurement	<ul style="list-style-type: none">♦ Wrong manual measurement or old chemicals have been used. Repeat the verification.♦ Reagents of AMI Codes mixed wrongly or not completely
	Sample flow alarm, but there is sample	<ul style="list-style-type: none">♦ Check sample flow at photometer outlet. It must be at least 100 ml/min. For that place the photometer outlet tube into a measuring cup for 1 minute.♦ Check sample line for pressure fluctuation.♦ Check for regular air bubble pattern.♦ Check flow alarm values in menu 5.3.1.3, p. 93)

7.2. Calibration Errors

7.2.1 Process calibration tc2

Possible error message

Slope error:

Possible cause	Corrective Action
Wrong manual measurement.	Repeat the manual measurement. Use fresh reagents.
<ul style="list-style-type: none"> Wrong reagent mixture Reagents not completely solved in water. 	<ul style="list-style-type: none"> Make a correct mixture. Mix long and intensively.

7.2.2 Process pH

Possible error message

Offset error:

Possible cause	Corrective Action
Manual measurement wrong.	Repeat the manual measurement.
Slope of last calibration wrong.	
pH sensor dirty, old or defect.	Clean or replace pH sensor, see Maintenance of pH sensor, p. 59 .
Cable connector corroded.	Replace cable and sensor.

7.2.3 Standard pH

Possible error message

Offset error or Slope error:

Possible cause	Corrective Action
Old, dirty or wrong buffer solutions.	Check buffers expiration date if necessary order new buffer.
Verify programmed buffer values with the values of the buffer solution used.	Change programmed buffer values or use correct buffer solution.
pH sensor dirty, old or defect.	Clean or replace pH sensor, see Maintenance of pH sensor, p. 59 .
Cable connector corroded.	Replace cable and sensor.

7.3. Error List

Error

Non-fatal Error. Indicates an alarm if a programmed value is exceeded.

Such Errors are marked **E0xx** (bold and black).


Fatal Error (blinking symbol)

Control of dosing devices is interrupted.

The indicated measured values are possibly incorrect.

Fatal Errors are divided in the following two categories:

- ♦ Errors which disappear if correct measuring conditions are recovered (i.e. Sample Flow low).
Such Errors are marked **E0xx** (bold and orange)
- ♦ Errors which indicate a hardware failure of the instrument.
Such Errors are marked **E0xx** (bold and red)

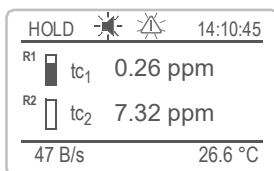


Error or fatal Error


Error not yet acknowledged.
Check **Pending Errors 1.1.5** and take corrective action.

Reagent level low

Indicates the remaining reagent in percent

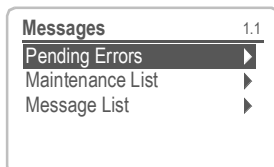

Navigate to menu <Messages>/<Pending Errors>.

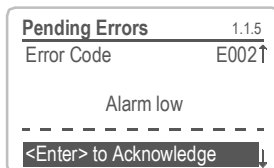

Press [ENTER] to acknowledge the Pending Errors.

⇒ *The Error is reset and saved in the Message List.*

Error	Description	Corrective action
E001	Alarm high tc1 (Total chlorine 1)	<ul style="list-style-type: none"> – check process – check programmed value, see 5.3.1.1.1.1, p. 92
E002	Alarm low tc1 (Total chlorine 1)	<ul style="list-style-type: none"> – check process – check programmed value, see 5.3.1.1.1.25, p. 92
E003	Alarm high tc2 (Total chlorine 2)	<ul style="list-style-type: none"> – check process – check programmed value, see 5.3.1.1.2.1, p. 92
E004	Alarm low tc2 (Total chlorine 2)	<ul style="list-style-type: none"> – check process – check programmed value, see 5.3.1.1.2.25, p. 93
E005	Alarm high cdc	<ul style="list-style-type: none"> – check process – check programmed value, see 5.3.1.1.3.1, p. 93
E006	Alarm low cdc	<ul style="list-style-type: none"> – check process – check programmed value, see 5.3.1.1.3.25, p. 93
E007	Sample Temp.high	<ul style="list-style-type: none"> – check sample temperature – check programmed value 5.3.1.2.1, p. 93
E008	Sample Temp. low	<ul style="list-style-type: none"> – check sample temperature – check programmed value 5.3.1.2.25, p. 93
E009	Sample Flow high	<ul style="list-style-type: none"> – check Inlet pressure – readjust sample flow – check program value 5.3.1.3.2, p. 94

Error	Description	Corrective action
E010	Sample Flow low	<ul style="list-style-type: none"> – check Inlet pressure – readjust sample flow – clean instrument, see Cleaning the protective Filter, p. 55 – check program value 5.3.1.3.35, p. 94
E011	Temp. shorted	<ul style="list-style-type: none"> – check wiring of temperature sensor, see Connection Diagram, p. 30 – check temperature sensor
E012	Temp. disconnected	<ul style="list-style-type: none"> – check wiring of temperature sensor, see Connection Diagram, p. 30 – check temperature sensor
E013	Case Temp. high	<ul style="list-style-type: none"> – check case/environment temperature – check program value
E014	Case Temp. low	<ul style="list-style-type: none"> – check case/environment temperature – check program value
E015	Valve 1 defective	<ul style="list-style-type: none"> – check Valve 1, see Cleaning the solenoid valve, p. 63
E016	DIS invalid	<ul style="list-style-type: none"> – This error appears after start-up and will disappear after the first valid measurement is finished.
E017	Control Timeout	<ul style="list-style-type: none"> – check control device or programming in Installation, Relay contact, Relay 1 and 2 5.3.2/3, p. 94
E018	Reagent Pump	<ul style="list-style-type: none"> – shut off power – check wiring, see Connection Diagram, p. 30
E019	Photometer not connected	<ul style="list-style-type: none"> – shut off power – check wiring, see Connection Diagram, p. 30

Error	Description	Corrective action
E020	Photometer dirty	<ul style="list-style-type: none"> – check process – clean the photometer, see Cleaning the Photometer, p. 56
E021	Absorbance too high	<ul style="list-style-type: none"> – Appears if disinf. value is too high – Check dosing system or process
E022	Reagent empty	<ul style="list-style-type: none"> – refill reagents, see Refill or replace Reagents, p. 48
E023	Cleaning Solution	<ul style="list-style-type: none"> – refill cleaning solution
E024	Input active	<ul style="list-style-type: none"> – See If Fault Yes is programmed in Menu 5.3.4, p. 99
E026	IC LM75	<ul style="list-style-type: none"> – call service
E028	Signal output open	<ul style="list-style-type: none"> – check wiring on signal outputs 1 and 2
E030	EEprom Frontend	<ul style="list-style-type: none"> – call service
E031	Calibration Recout	<ul style="list-style-type: none"> – call service
E032	Wrong Frontend	<ul style="list-style-type: none"> – call service
E033	Alarm high pH	<ul style="list-style-type: none"> – check process – check programmed value, see 5.3.1.4.1, p. 94
E034	Alarm low pH	<ul style="list-style-type: none"> – check process – check programmed value, see 5.3.1.4.25, p. 94



Error	Description	Corrective action
E049	Power-on	– none, normal status
E050	Power-down	– none, normal status
E065	DPD / Buffer	– Operating display, upper status line. The number next to the triangle, indicates the remaining reagents in%. Refill reagents on time. See Refill or replace Reagents, p. 48 .
E067	Cleaning Solution	– Operating display, lower status line. The number next to the triangle, indicates the remaining cleaning solution in%. Refill cleaning solution on time.

7.4. Opening the peristaltic pump housing

For some electrical connections (e.g. when replacing suction lancets), it is necessary to open the housing of the peristaltic pump. To do this, proceed as follows:

- 1 Switch off the analyzer according to [Stop of Operation for Maintenance](#), p. 47.
- 2 Remove the protection cap and all pump tubes as described in [Dismount pump tubes](#), p. 61.
- 3 Unscrew the 4 screws of the peristaltic pump housing and remove the cover.
- 4 Disconnect the motor connector [A].



A Motor connector

- 5 Feed the cable into the housing through one of the PG7 cable glands.
- 6 Connect the cable to the terminal block of the peristaltic pump according to [Connection Diagram](#), p. 30.
- 7 Reassemble in reverse order.

7.5. Replacing Fuses



WARNING


External Voltage.

External supplied devices connected to relay 1 or 2 or to the alarm relay can cause electrical shocks.

- ♦ Make sure that the devices connected to the following contacts are disconnected from the power before resuming installation.
 - relay 1
 - relay 2
 - alarm relay

When a fuse has blown, find out the cause and fix it before replacing it with a new one.

Use tweezers or needle-nosed pliers to remove the defective fuse. Use original fuses provided by SWAN only.

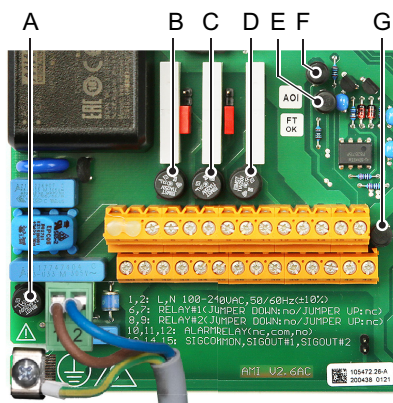

- A** AC variant: 1.6 AT/250 V Instrument power supply
DC variant: 3.15 AT/250 V Instrument power supply
- B** 1.0 AT/250V Relay 1
- C** 1.0 AT/250V Relay 2
- D** 1.0 AT/250V Alarm relay
- E** 1.0 AF/125V Signal output 2
- F** 1.0 AF/125V Signal output 1
- G** 1.0 AF/125V Signal output 3

8. Program Overview

For explanations about each parameter of the menus see [Program List and Explanations, p. 81](#).

- ♦ Menu 1 **Messages** informs about pending errors and maintenance tasks and shows the error history. Password protection possible. No settings can be modified.
- ♦ Menu 2 **Diagnostics** is always accessible for everybody. No password protection. No settings can be modified.
- ♦ Menu 3 **Maintenance** is for service: Calibration, simulation of outputs and set time/date. Please protect with password.
- ♦ Menu 4 **Operation** is for the user, allowing to set limits, alarm values, etc. The presetting is done in the menu Installation (only for the System engineer). Please protect with password.
- ♦ Menu 5 **Installation**: Defining assignment of all inputs and outputs, measuring parameters, interface, passwords, etc. Menu for the system engineer. Password strongly recommended.

8.1. Messages (Main Menu 1)

Pending Errors 1.1*	<i>Pending Errors</i>	1.1.5*	* Menu numbers
Maintenance List 1.2*	<i>Maintenance List</i>	1.2.5*	
Message List 1.3*	<i>Number Date, Time</i>	1.3.1*	

8.2. Diagnostics (Main Menu 2)

Identification	Designation	AMI Codes-II TC	* Menu numbers
2.1*	Version	V6.20 - 05/18	
	Peripherals	PeriClip 1 / 1.06	2.1.3.1*
	2.1.3*	PeriClip 2	only with cleaning module
	Factory Test	Instrument	2.1.4.1*
	2.1.4*	Motherboard	
		Front End	
	Operating Time	Years / Days / Hours / Minutes / Seconds	2.1.5.1*
	2.1.5*		
Sensors	Photometer	Absorbance	
2.2*	2.2.1*	(Raw value) Hz	
		Cal. History	Number 2.2.1.4.1*
		2.2.1.4*	Date, Time
			Factor fc
			Factor tc
		Ver. History	Number 2.2.1.5.1*
		2.2.1.5*	Date, Time
			Absorbance
			Reference value
	pH Electrode	Current Value / (Raw value)	
	2.2.2*	Cal. History	Number 2.2.2.5.1*
		2.2.2.5*	Date, Time
			Offset / Slope
	Miscellaneous	Case Temp.	2.2.3.1*
	2.2.3*		
Sample	Sample ID	2.3.1*	
2.3*	Sample Flow B/s		
	(Raw value) Hz		
	Temperature / (Nt5k)		only with option pH
I/O State	Alarm Relay	2.4.1*	
2.4*	Relay 1 & 2	2.4.2*	
	Input		
	Signal Output 1 & 2		
Interface	Protocol	2.5.1*	(only with RS485
2.5*	Baud rate		interface)

8.3. Maintenance (Main Menu 3)

Calibration	Total chlorine 2	<i>Current Value</i>	* Menu numbers	
3.1*	3.1.1*	<i>Factor</i>		
		<i>Process Value</i>	3.1.1.4*	
	Process pH	<i>Current Value</i>		
	3.1.2*	<i>Offset</i>		
		<i>Process Value</i>	3.1.2.4*	
	Standard pH	<i>(Progress)</i>	3.1.3.5*	
	3.1.3*			
Service	Verification	<i>(Progress)</i>	3.2.1.1*	
3.2*	3.2.1*			
	Fill System	<i>(Progress)</i>	3.2.2.5*	
	3.2.2*			
Simulation	<i>Alarm Relay</i>	3.3.1*		
3.3*	<i>Relay 1</i>	3.3.2*		
	<i>Relay 2</i>	3.3.3*		
	<i>Signal Output 1</i>	3.3.4*		
	<i>Signal Output 2</i>	3.3.5*		
	<i>Valve</i>	3.3.6*		
Set Time	<i>(Date), (Time)</i>			
3.4*				
Cleaning	Parameters	Mode	3.5.1.1*	
3.5*	3.5.1*	Interval	<i>Interval</i>	3.5.1.20*
		3.5.1.1*	<i>Delay</i>	3.5.1.3*
			<i>Signal Outputs</i>	3.5.1.4*
			<i>Output/Control</i>	3.5.1.5*
		Daily	<i>Start time</i>	3.5.1.21
		3.5.1.1*	<i>Delay</i>	3.5.1.3*
			<i>Signal Outputs</i>	3.5.1.4*
			<i>Output/Control</i>	3.5.1.5*
		Weekly	<i>Calendar</i>	Start time
		3.5.1.1*	<i>Delay</i>	Mo. to Su
			<i>Signal Outputs</i>	3.5.1.4*
			<i>Output/Control</i>	3.5.1.5
		Off	3.5.1.1*	

Fill Channel 11	(Progress)	3.5.2.5*	* Menu numbers
3.5.2*			
Fill Channel 12	(Progress)	3.5.3.5*	
3.5.3*			

8.4. Operation (Main Menu 4)

Sensors 4.1*	Filter Time Const.	4.1.1*		
	Hold after Cal.	4.1.2*		
	Meas. Interval	4.1.3*		
	Default pH	4.1.4*		
Relay Contacts 4.2*	Alarm Relay 4.2.1*	Total chlorine 1		Alarm High 4.2.1.1.1*
		4.2.1.1*		Alarm Low 4.2.1.1.25*
				Hysteresis 4.2.1.1.35*
				Delay 4.2.1.1.45*
		Total chlorine 2		Alarm High 4.2.1.2.1*
		4.2.1.2*		Alarm Low 4.2.1.2.25*
				Hysteresis 4.2.1.2.35*
				Delay 4.2.1.2.45*
		Calc. Dichl.		Alarm High 4.2.1.3.1*
		4.2.1.3*		Alarm Low 4.2.1.3.25*
				Hysteresis 4.2.1.3.35*
				Delay 4.2.1.3.45*
		Alarm pH		Alarm High 4.2.1.4.1*
		4.2.1.4*		Alarm Low 4.2.1.4.25*
				Hysteresis 4.2.1.4.35*
				Delay 4.2.1.4.45*
	Relay 1 & 2 4.2.2* & 4.2.3*	Setpoint	4.2.x.100*	
		Hysteresis	4.2.x.200*	
		Delay	4.2.x.30*	
	Input 4.2.4*	Active	4.2.4.1*	
		Signal Outputs	4.2.4.2*	
		Output / Control	4.2.4.3*	
		Fault	4.2.4.4*	
		Delay	4.2.4.5*	
Logger 4.3*	Log Interval	4.3.1*		
	Clear Logger	4.3.2*		
	Eject USB Stick	4.3.3*		(If USB interface is installed)

Display 4.4*	Screen 1	Row 1	4.4.1.1*	* Menu numbers
		Row 2	4.4.1.2*	
		Row 3	4.4.1.3*	
	Screen 2	Row 1	4.4.2.1*	
		Row 2	4.4.2.2*	
		Row 3	4.4.2.3*	

8.5. Installation (Main Menu 5)

Sensors 5.1*	Dimension	5.1.1*			
	Ref. Verification	5.1.2*			
	Meas. Range	5.1.3*			
	Standards	Standard 1	5.1.4.1*	only with pH option	
	5.1.4*	Standard 2	5.1.4.2*		
Signal Outputs 5.2*	Cleaning	5.1.5		only with Cleaning Module	
	Signal Output 1 & 2	Parameter	5.2.1.1 & 5.2.2.1*		
		Current Loop	5.2.1.2 & 5.2.2.2*		
		Function	5.2.1.3 & 5.2.2.3*		
		Scaling	Range Low	5.2.x.40.10*	
Relay Contacts 5.3*	Alarm Relay	5.2.x.40	Range High	5.2.x.40.20*	
		Disinfection	Total chlorine 1	Alarm High	5.3.1.1.1.1*
			5.3.1.1.1*	Alarm Low	5.3.1.1.1.25*
				Hysteresis	5.3.1.1.1.35*
				Delay	5.3.1.1.1.45*
		Total chlorine 2	Alarm High	5.3.1.1.2.1*	
			5.3.1.1.2*	Alarm Low	5.3.1.1.2.25*
				Hysteresis	5.3.1.1.2.35*
				Delay	5.3.1.1.2.45*
		Calc. Dichl.	Alarm High	5.3.1.1.3.1*	
			5.3.1.1.3*	Alarm Low	5.3.1.1.3.25*
				Hysteresis	5.3.1.1.3.35*
				Delay	5.3.1.1.3.45*
		Sample Flow	Flow Alarm	5.3.1.3.1*	
			Alarm High	5.3.1.3.2*	
			Alarm Low	5.3.1.3.35*	
		Case Temp. high	5.3.1.5*		

		Case Temp. low	5.3.1.6*	
		Temperature	Alarm High	5.3.1.5.1*
		5.3.1.5*	Alarm Low	5.3.1.5.25*
		pH	Alarm High	5.3.1.6.1*
		5.3.1.6*	Alarm Low	5.3.1.6.25*
			Hysteresis	5.3.1.6.35*
			Delay	5.3.1.6.45*
		Relay 1 & 2	Function	5.3.2.1 & 5.3.3.1*
		5.3.2* & 5.3.3*	Parameter	5.3.2.x & 5.3.3.x*
			Setpoint	5.3.2.x & 5.3.3.x*
			Hysteresis	5.3.2.x & 5.3.3.x*
			Delay	5.3.2.x & 5.3.3.x*
		Input	Active	5.3.4.1*
		5.3.4*	Signal Outputs	5.3.4.2*
			Output/Control	5.3.4.3*
			Fault	5.3.4.4*
			Delay	5.3.4.5*
Miscellaneous	Language	5.4.1*		*Menu numbers
5.4*	Set defaults	5.4.2*		
	Load Firmware	5.4.3*		
	Password	Messages	5.4.4.1*	
	5.4.4*	Maintenance	5.4.4.2*	
		Operation	5.4.4.3*	
		Installation	5.4.4.4*	
	Sample ID	5.4.5*		
	Line Break Detection	5.4.6*		
Interface	Protocol	5.5.1*		(only with RS485
5.5*	Device Address	5.5.21*		interface)
	Baud Rate	5.5.31*		
	Parity	5.5.41*		

9. Program List and Explanations

1 Messages

1.1 Pending Errors

- 1.1.5 Provides the list of active errors with their status (active, acknowledged). If an active error is acknowledged, the alarm relay is active again. Cleared errors are moved to the Message list.

1.2 Maintenance List

- 1.2.5 Demands necessary maintenance, e.g. preparing new reagents.

1.2 Message List

- 1.3.1 Shows the error history: Error code, date / time of issue and status (active, acknowledged, cleared). 65 errors are memorized. Then the oldest error is cleared to save the newest error (circular buffer).

2 Diagnostics

In diagnostics mode, the values can only be viewed, not modified.

2.1 Identification

Designation: View the Designation of instrument.
Version: Firmware of instrument (e.g. V6.20-05/18)

- 2.1.3 **Peripherals:** PeriClip 1: Firmware of peristaltic pump (e.g. 1.06)

- 2.1.4 **Factory Test:** Test date of the Instrument, Motherboard and Frontend. QC factory test.

- 2.1.5 **Operating Time:** Years/Days/Hours/Minutes/Seconds

2.2 Sensors

- 2.2.1 **Photometer:**

Absorbance: Process value, depends on sample.
Raw value: Shows the actual photometer signal in Hz.

- 2.2.1.4 **Cal. History:** Shows the diagnostic values of the last calibrations.

Number: Counter for the calibrations
Date, Time: Date and time assigned to a number.
Slope: Slope photometer: 0.8–1.2

- 2.2.1.5 **Ver. History:** Shows the verification values of the last verifications:

Number: Calibration counter.
Date, Time: Date and time of the calibration.
Absorbance: Measured absorbance of the reference kit.
Reference value: True value of the reference kit according to label.

2.2.2 pH Electrode: Only if option pH is installed.
Current Value: Shows the actual measured pH value.
Raw value: Shows the actual electrode voltage in mV.

2.2.2.5 Cal. History: Shows the calibration values of the last pH sensor calibrations. Offset in mV and slope in mV/pH.

Typical offset of pH electrode: $< \pm 30$ mV.
Max. tolerated offset: $< \pm 60$ mV
Typical slope of pH electrode: 55–65 mV/pH unit.
Max. limits: 40–65 mV/pH

2.2.3 Miscellaneous:

2.2.3.1 Case Temp: Shows the current temperature in °C inside the transmitter.

2.3 Sample

2.3.1 Sample ID: Shows the identification assigned to a sample. This identification is defined by the user to identify the location of the sample.
Sample Flow: Shows the actual sample flow in B/s (bubbles per second). Sample flow must be above 5 B/s.
Raw value: Shows the raw value of the sample flow in Hz.
Temperature: Only if option pH is installed.
Actual sample temperature in °C and in Ohm (NT5K)

2.4 I/O State

Shows current status of all in- and outputs.

2.4.1/2.4.2 Alarm Relay: Active or inactive
Relay 1 & 2: Active or inactive
Input: Open or closed
Signal Output 1 & 2: Actual current in mA
Signal Output 3: Actual current in mA (if option is installed)

2.5 Interface

Only available if optional interface is installed.
Shows the programmed communication settings.

3 Maintenance

3.1 Calibration

In this menu, you can correct measuring values (disinfectant and pH) or calibrate offset and slope of pH electrode.

- 3.1.1 **Total chlorine 2:** Possibility to correct the disinfectant value. See [Process Calibration of tc 2, p. 52](#), for more details.
- 3.1.2 **Process pH:** Only available, if option pH has been installed. Correction of pH electrode. See [Process Calibration of tc 2, p. 52](#), for details.
- 3.1.3 **Standard pH:** Only available, if option pH has been installed. Calibration of pH electrode with the two standard solutions programmed in Installation 5.1.3. See [Standard pH, p. 54](#), for details.

3.2 Service

- 3.2.1 **Verification:** Performs a verification using the reference kit. Follow dialog. See [Verification, p. 51](#).
- 3.2.2 **Fill System:** Activates the reagent pump. The function Fill System is used to fill or flush the reagent tubes.



3.3 Simulation

To simulate a value or a relay state, select the

- ♦ alarm relay,
- ♦ relay 1 or 2
- ♦ signal output 1 or 2
- ♦ valve 1

with the [>] or [<] key.

Press the [Enter] key.

Change the value or state of the selected item with the [>] or [<] key.

Press the [Enter] key.

⇒ *The value is simulated by the relay/signal output.*

Alarm Relay: Active or inactive
Relay 1 & 2: Active or inactive
Signal Output 1 & 2: Actual current in mA
Signal Output 3: Actual current in mA (if option is installed)
Valve 1 Active or inactive

At the absence of any key activities, the instrument will switch back to normal mode after 20 min. If you quit the menu, all simulated values will be reset.

3.4 Set Time

Adjust date and time.

3.5 Cleaning

Automatic cleaning process using the optional Cleaning Module-II. Cleaning is not possible if one of the following errors is active:

- ♦ E009/E010 Sample flow high/low
- ♦ E023 Cleaning solution

3.5.1 Parameters

3.5.1.1 *Mode:* The following modes can be chosen: interval, daily, weekly or off.

If Mode = Interval

3.5.1.20 *Interval:* Select one of the following cleaning intervals:
 1 h, 2 h, 3 h, 4 h, 6 h, 8 h, 12 h.

3.5.1.3 *Delay:* During cleaning plus the delay time, the status of the signal and control outputs is as set in [3.5.1.4](#) and [3.5.1.5](#).
 Range: 0–6000 s

3.5.1.4 *Signal Outputs:* Select the operation mode of the signal outputs during cleaning:

Cont.: Signal outputs continue to issue the measured value.

Hold: Signal outputs hold the last valid measured value.
 Measurement is interrupted. Errors, except fatal errors, are not issued.

Off: Signal outputs are switched off (set to 0 or 4 mA).
 Errors, except fatal errors, are not issued.

- 3.5.1.5 *Output/Control:* Relay or signal output:
Cont.: Controller continues normally.
Hold: Controller continues based on the last valid value.
Off: Controller is switched off.

If Mode = daily

The start of the daily cleaning cycle can be set to any time of day.

- 3.5.1.21 *Start time:* Time of the automatic start of the cleaning process.
Range: 00:00:00–23:59:59

- 3.5.1.3 *Delay:* see mode interval.
3.5.1.4 *Signal Outputs:* see mode interval.
3.5.1.5 *Output/Control:* see mode interval.

If Mode = weekly

The start of the automatic cleaning cycle can be set to one or more weekdays and any time of day. The programmed time of day is valid for all selected weekdays.

3.5.1.22 Calendar:

- 3.5.1.22.1 Start time: Time of the automatic start of the cleaning process (valid for all selected weekdays).
3.5.1.22.2 Monday: Possible settings: on or off
to
3.5.1.22.8 Sunday: Possible settings: on or off
3.5.1.3 *Delay:* see mode interval.
3.5.1.4 *Signal Outputs:* see mode interval.
3.5.1.5 *Output/Control:* see mode interval.

all modes

- 3.7.2** *Fill Channel 11:* Activates the cleaning pump and switches the valve to cleaning solution 1 (right canister).
3.7.3 *Fill Channel 12:* Activates the cleaning pump and switches the valve to cleaning solution 2 (left canister).

4 Operation

4.1 Sensors

- 4.1.1 *Filter Time Constant:* Used to damp noisy signals. The higher the filter time constant, the slower the system reacts to changes of the measured value.
 Range: 5–300 sec
- 4.1.2 *Hold after Cal:* Delay permitting the instrument to stabilize again after calibration. During calibration- plus hold-time, the signal outputs are frozen (held on last valid value), alarm values, limits are not active.
 Range: 0–6'000 sec
- 4.1.3 *Meas. Interval:* The measuring interval of "Total chlorine 2" can be set according to the process requirements.
 Range: 3–60 min
- 4.1.4 *Default pH:* If the pH value of the sample is known it can be entered in this menu. This menu only appears if the pH option is not installed.
 Range: 0–14 pH

4.2 Relay Contacts

See [5.3 Relay Contacts](#), p. 92.

4.3 Logger

The instrument is equipped with an internal logger. The data can be copied to a PC with an USB stick if option USB interface is installed. The logger can save approx. 1500 data records. Records consists of: Date, time, alarms, measured value, measured value uncompensated, temperature, flow.

Range: 1 Second to 1 hour

- 4.3.1 *Log Interval:* Select a convenient log interval. Consult the table below to estimate the max logging time. When the login buffer is full, the oldest data record is erased to make room for the newest one. (circular buffer)

Interval	1 s	5 s	1 min	5 min	10 min	30 min	1 h	Event Driven
Time	25 min	2 h	25 h	5 d	10 d	31 d	62 d	

- 4.3.2 *Clear Logger:* If confirmed with **yes**, the complete logger data is deleted. A new data series is started.

4.4 Display

Process values are displayed on two screens. Toggle screens with the [▲] key. Each screen displays max. 3 process values.

4.4.1 Screen 1

4.4.1.1 Row 1

4.4.1.2 Row 2

4.4.1.3 Row 3

Possible settings for all rows are:

- ◆ None
- ◆ Total chlorine 1
- ◆ Total chlorine 2
- ◆ Calc. dichloramine
- ◆ pH

4.4.2 Screen 2

Same as screen 1.

5 Installation

5.1 Sensors

5.1.1 *Dimension:* The measuring value can be displayed as ppm or mg/l

5.1.2 *Ref. Verification:* Set absorbance value of verification kit according to label.

Range: 0.200–0.600

5.1.3 *Meas. Range:* available settings are standard or extended.

- ◆ select “standard” for application up to 5 ppm
- ◆ select “extended” for applications up to 10 ppm

Note: *The reagent consumption of the instrument is higher if the measuring mode extended is set.*

5.1.5 **Cleaning:** Program whether the cleaning module uses one or two solutions.

Range: 1 solution, 2 solutions

5.2 Signal Outputs


5.2.1 & 5.2.2 **Signal Output 1 and 2:** Assign process value, the current loop range and a function to each signal output.


Note: *The navigation in the menu <Signal Output 1> and <Signal Output 2> is equal. For reason of simplicity only the menu numbers of Signal Output 1 are used in the following.*

- 5.2.1.1 **Parameter:** Assign one of the process values to the signal output.
Available values:
- ♦ Total chlorine 1
 - ♦ Total chlorine 2
 - ♦ Calc. dichloramine (*Calculated dichloramine*)
 - ♦ Temperature
 - ♦ Sample flow
 - ♦ pH
- 5.2.1.2 **Current Loop:** Select the current range of the signal output.
Make sure the connected device works with the same current range.
Available ranges: 0–20 mA or 4–20 mA
- 5.2.1.3 **Function:** Define if the signal output is used to transmit a process value or to drive a control unit. Available functions are:
- ♦ Linear, bilinear or logarithmic for process values.
See [As process values, p. 88](#)
 - ♦ Control upwards or control downwards for controllers.
See [As control output, p. 90](#)

As process values

The process value can be represented in 3 ways: linear, bilinear or logarithmic. See graphs below.

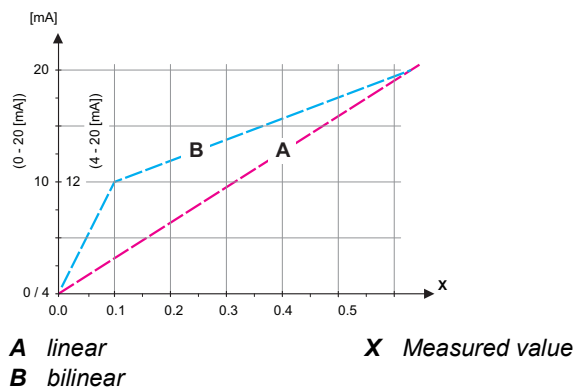

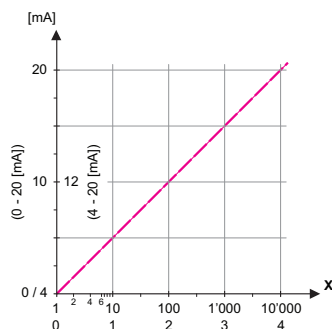

X Measured value (logarithmic)

5.2.1.40 Scaling: Enter beginning and end point (Range low & high) of the linear or logarithmic scale. In addition, the midpoint for the bilinear scale.

Parameter Total chlorine 1

5.2.1.40.10 Range low: 0–20 ppm or 0–20 mg/l

5.2.1.40.20 Range high: 0–20 ppm or 0–20 mg/l

Parameter Total chlorine 2

5.2.1.40.11 Range low: 0–20 ppm or 0–20 mg/l

5.2.1.40.21 Range high: 0–20 ppm or 0–20 mg/l

Parameter Calc. dichloramine

5.2.1.40.12 Range low: 0–20 ppm or 0–20 mg/l

5.2.1.40.22 Range high: 0–20 ppm or 0–20 mg/l

Parameter Temperature

5.2.1.40.13 Range low: -30 to +120 °C

5.2.1.40.23 Range high: -30 to +120 °C

Parameter Sample flow

5.2.1.40.14 Range low: 0 –600 B/s

5.2.1.40.24 Range high: 0 –600 B/s

Parameter pH

5.2.1.40.15 Range low: 0 –14 pH

5.2.1.40.25 Range high: 0 –14 pH


As control output

Signal outputs can be used for driving control units. We distinguish different kinds of controls:

- ♦ *P-controller*: The controller action is proportional to the deviation from the setpoint. The controller is characterized by the P-Band. In the steady-state, the setpoint will never be reached. The deviation is called steady-state error.
Parameters: setpoint, P-Band
- ♦ *PI-controller*: The combination of a P-controller with an I-controller will minimize the steady-state error. If the reset time is set to zero, the I-controller is switched off.
Parameters: setpoint, P-Band, reset time.
- ♦ *PD-controller*: The combination of a P-controller with a D-controller will minimize the response time to a fast change of the process value. If the derivative time is set to zero, the D-controller is switched off.
Parameters: setpoint, P-Band, derivative time.
- ♦ *PID-controller*: The combination of a P-, an I - and a D-controller allows a proper control of the process.
Parameters: setpoint, P-Band, reset time, derivative time.

Ziegler-Nichols method for the optimization of a PID controller:

Parameters: Setpoint, P-Band, Reset time, Derivative time

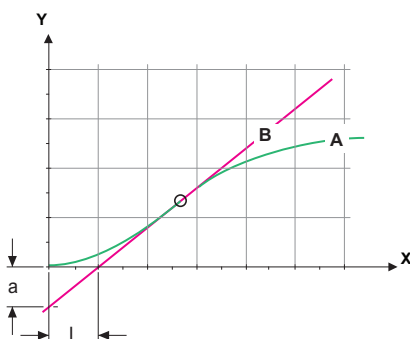

- | | | |
|----------|------------------------------------|--------------|
| A | Response to maximum control output | $Xp = 1.2/a$ |
| B | Tangent on the inflection point | $Tn = 2L$ |
| X | Time | $Tv = L/2$ |

The point of intersection of the tangent with the respective axis will result in the parameters a and L.

Consult the manual of the control unit for connecting and programming details. Choose control upwards or downwards.

Control upwards/downwards

Setpoint: User-defined process value (Measured value or flow)
P-Band: Range below (upwards control) or above (downwards control) the set-point, within the dosing intensity is reduced from 100% to 0% to reach the set-point without overshooting.

- | | |
|-----------------|---|
| 5.2.1.43 | Control Parameters: if Parameters = Total chlorine 1 |
| 5.2.1.43.10 | <i>Setpoint:</i> 0–20 ppm or 0–20 mg/l |
| 5.2.1.43.20 | <i>P-Band:</i> 0–20 ppm 0–20 mg/l |
| 5.2.1.43 | Control Parameters: if Parameters = Total chlorine 2 |
| 5.2.1.43.11 | <i>Setpoint:</i> 0–20 ppm or 0–20 mg/l |
| 5.2.1.43.21 | <i>P-Band:</i> 0–20 ppm 0–20 mg/l |
| 5.2.1.43 | Control Parameters: if Parameters = Calc. dichloramine |
| 5.2.1.43.12 | <i>Setpoint:</i> 0–20 ppm or 0–20 mg/l |
| 5.2.1.43.22 | <i>P-Band:</i> 0–20 ppm 0–20 mg/l |
| 5.2.1.43 | Control Parameters: if Parameters = Temperature |
| 5.2.1.43.13 | <i>Setpoint:</i> -30 to +120 °C |
| 5.2.1.43.23 | <i>P-Band:</i> 0–100 °C |
| 5.2.1.43 | Control Parameters: if Parameters = Sample Flow |
| 5.2.1.43.14 | <i>Setpoint:</i> 0–600 B/s |
| 5.2.1.43.24 | <i>P-Band:</i> 0–200 B/s |
| 5.2.1.43 | Control Parameters: if Parameters = pH |
| 5.2.1.43.15 | <i>Setpoint:</i> 0 – 14 pH |
| 5.2.1.43.25 | <i>P-Band:</i> 0 – 14 pH |
| 5.2.1.43.3 | <i>Reset time:</i> The reset time is the time till the step response of a single I-controller will reach the same value as it will be suddenly reached by a P-controller.
Range: 0–9'000 sec |
| 5.2.1.43.4 | <i>Derivative time:</i> The derivative time is the time till the ramp response of a single P-controller will reach the same value as it will be suddenly reached by a D-controller.
Range: 0–9'000 sec |
| 5.2.1.43.5 | <i>Control timeout:</i> If a controller action (dosing intensity) is constantly over 90% during a defined period of time and the process value does not come closer to the setpoint, the dosing process will be stopped for safety reasons.
Range: 0–720 min |

5.3 Relay Contacts

5.3.1 Alarm Relay: The alarm relay is used as cumulative error indicator. Under normal operating conditions the contact is active.

The contact is inactive at:

- ◆ Power loss
- ◆ Detection of system faults like defective sensors or electronic parts
- ◆ High case temperature
- ◆ Lack of reagents
- ◆ Process values out of programmed ranges.

Program alarm levels, hysteresis values and delay times for the following parameters:

- ◆ Total chlorine 1
- ◆ Total chlorine 2
- ◆ Calc. dichloramine (*Calculated dichloramine*)
- ◆ Temperature
- ◆ Sample flow
- ◆ pH

5.3.1.1 Disinfection

5.3.1.1.1 Total chlorine 1

5.3.1.1.1.1 *Alarm High:* If the measured value rises above the alarm high value, the alarm relay is activated and E001 is displayed in the message list. Range: 0.00–20.00 ppm

5.3.1.1.1.25 *Alarm Low:* If the measured value falls below the alarm low value, the alarm relay is activated and E002 is displayed in the message list.
Range: 0.00–20.00 ppm

5.3.1.1.1.35 *Hysteresis:* Within the hyst. range, the relay does not switch. This prevents damage of relays contacts when the measured value fluctuates around the alarm value.
Range: 0.00–20.00 ppm

5.3.1.1.1.45 *Delay:* Duration, the activation of the alarm relay is retarded after the measuring value has risen above/fallen below the programmed alarm.
Range: 0.00–28'800 sec

5.3.1.1.2 Total chlorine 2

5.3.1.1.2.1 *Alarm High:* If the measured value rises above the alarm high value, the alarm relay is activated and E003 is displayed in the message list. Range: 0.00–20.00 ppm

- 5.3.1.1.2.25 *Alarm Low:* If the measured value falls below the alarm low value, the alarm relay is activated and E004 is displayed in the message list.
 Range: 0.00–20.00 ppm
- 5.3.1.1.2.35 *Hysteresis:* Within the hyst. range, the relay does not switch. This prevents damage of relays contacts when the measured value fluctuates around the alarm value.
 Range: 0.00–20.00 ppm
- 5.3.1.1.2.45 *Delay:* Duration, the activation of the alarm relay is retarded after the measuring value has risen above/fallen below the programmed alarm.
 Range: 0.00–28'800 sec
- 5.3.1.1.3 Calc. dichl.**
- 5.3.1.1.3.1 *Alarm High:* If the measured value rises above the alarm high value, the alarm relay is activated and E005 is displayed in the message list. Range: 0.00–20.00 ppm
- 5.3.1.1.3.25 *Alarm Low:* If the measured value falls below the alarm low value, the alarm relay is activated and E006 is displayed in the message list. Range: 0.00–20.00 ppm
- 5.3.1.1.3.35 *Hysteresis:* Within the hyst. range, the relay does not switch. This prevents damage of relays contacts when the measured value fluctuates around the alarm value.
 Range: 0.00–20.00 ppm
- 5.3.1.1.2.45 *Delay:* Duration, the activation of the alarm relay is retarded after the measuring value has risen above/fallen below the programmed alarm.
 Range: 0.00–28'800 sec
- 5.3.1.2 Sample Temp.:** Only available if pH option is installed. Define the measuring value, which should issue an alarm high respectively low.
- 5.3.1.2.1 *Alarm High:* If the sample temperature rises above the programmed value E007 is issued. and low (E008)
 Range: 30–70 °C
- 5.3.1.2.25 *Alarm Low:* If the sample temperature falls below the programmed value E008 is issued.
 Range: 0–20 °C
- 5.3.1.3 Sample Flow:** Define at which sample flow a flow alarm should be issued.
- 5.3.1.3.1 *Flow Alarm:* Program whether the alarm relay should be activated if there is a flow alarm. The flow alarm will always be indicated in the display, pending error list, saved in the message list and the logger. Available values: Yes or No

Note: Sufficient flow is essential for a correct measurement.
 We recommend to program yes.

- 5.3.1.3.2 **Alarm High:** If the measuring values rises above the programmed value E009 will be issued.
 Range: 100–600 B/s
- 5.3.1.3.35 **Alarm Low:** If the measuring values falls below the programmed value E010 will be issued.
 Range: 5–80 B/s
- 5.3.1.4 Alarm pH:** Only available if pH option is installed. Define the measuring value, which should issue an alarm high respectively low.
- 5.3.1.4.1 **Alarm High:** If the measured value rises above the alarm high value, the alarm relay is activated and E033 is displayed in the message list.
 Range: 0–14 pH
- 5.3.1.4.25 **Alarm Low:** If the measured value falls below the alarm low value, the alarm relay is activated and E034 is displayed in the message list
 Range: 0–14 pH
- 5.3.1.4.35 **Hysteresis:** Within the hyst. range, the relay does not switch. This prevents damage of relays contacts when the measured value fluctuates around the alarm value
 Range: 0–14 pH
- 5.3.1.4.45 **Delay:** Duration, the activation of the alarm relay is retarded after the measuring value has risen above/fallen below the programmed alarm.
 Range: 0–28'800 sec
- 5.3.1.5 **Case Temp. high:** Set the alarm high value for temperature of electronics housing. If the value rises above the programmed value E013 is issued.
 Range: 30–75 °C
- 5.3.1.6 **Case Temp. low:** Set the alarm low value for temperature of electronics housing. If the value falls below the programmed value E014 is issued.
 Range: -10 to +20 °C
- 5.3.2/3 Relay 1 and 2:** The contacts can be set as normally open or normally closed with a jumper. See [Relay 1 and 2, p. 33](#).
 The function of relay contacts 1 or 2 are defined by the user.
- Note:** *The navigation in the menu <Relay 1> and <Relay 2> is equal. For reason of simplicity only the menu numbers of Relay 1 are used in the following.*
- 1** First select the functions as:
- Limit upper/lower,
 - Control upwards/downwards,
 - Timer
 - Fieldbus
 - End of Batch (relay 2 only)

- 2 Then enter the necessary data depending on the selected function.

5.3.2.1 Function = Limit upper/lower:

When the relays are used as upper or lower limit switches, program the following:

5.3.2.20 *Parameter*: select a process value

5.3.2.300 *Setpoint*: If the measured value rises above respectively falls below the set-point, the relay is activated.

Parameter	Range
Total chlorine 1	0–20 ppm
Total chlorine 2	0–20 ppm
Calc. dichloramine	0–20 ppm
Temperature	-30 to +120 °C
Sample flow	0–600 B/s
pH	0–14 pH

5.3.2.400 *Hysteresis*: within the hysteresis range, the relay does not switch. This prevents damage of relay contacts when the measured value fluctuates around the alarm value.

Parameter	Range
Total chlorine 1	0–20 ppm
Total chlorine 2	0–20 ppm
Calc. dichloramine	0–20 ppm
Temperature	0 to +100 °C
Sample flow	0–200 B/s
pH	0–14 pH

5.3.2.50 *Delay*: Duration, the activation of the alarm relay is retarded after the measuring value has risen above/fallen below the programmed alarm.

Range. 0–600 sec

5.3.2.1 Function = Control upwards/downwards:

The relays may be used to drive control units such as solenoid valves, membrane dosing pumps or motor valves. When driving a motor valve both relays are needed, relay 1 to open and relay 2 to close the valve.

5.3.2.22 **Parameter:** Choose on of the following process values.

- ◆ Total chlorine 1
- ◆ Total chlorine 2
- ◆ Calc. dichloramine
- ◆ pH
- ◆ Temperature
- ◆ Sample Flow

5.3.2.32 **Settings:** Choose the respective actuator:

- ◆ Time proportional
- ◆ Frequency
- ◆ Motor valve

5.3.2.32.1 Actuator = Time proportional

Examples of metering devices that are driven time proportional are solenoid valves, peristaltic pumps.
Dosing is controlled by the operating time.

5.3.2.32.20 **Cycle time:** duration of one control cycle (on/off change).
Range: 0–600 sec.

5.3.2.32.30 **Response time:** Minimal time the metering device needs to react.
Range: 0–240 sec.

5.3.2.32.4 Control Parameters

Range for each Parameter same as [5.2.1.43, p. 91](#)

5.3.2.32.1 Actuator = Frequency

Examples of metering devices that are pulse frequency driven are the classic membrane pumps with a potential free triggering input.
Dosing is controlled by the repetition speed of dosing shots.

5.3.2.32.21 **Pulse frequency:** Max. pulses per minute the device is able to respond to. Range: 20–300/min.

5.3.2.32.31 Control Parameters

Range for each Parameter same as [5.2.1.43, p. 91](#)

5.3.2.32.1 Actuator = Motor valve

Dosing is controlled by the position of a motor driven mixing valve.

5.3.2.32.22 **Run time:** Time needed to open a completely closed valve
Range: 5–300 sec.

5.3.2.32.32 **Neutral zone:** Minimal response time in % of the runtime. If the requested dosing output is smaller than the response time, no change will take place.
Range: 1–20 %

5.3.2.32.4 Control Parameters

Range for each Parameter same as [5.2.1.43, p. 91](#)

5.3.2.1 Function = Timer:

The relay will be active repetitively depending on the programmed time scheme.

5.3.2.24 *Mode:* Operating mode (interval, daily, weekly)

5.3.2.24 *Interval*

5.3.2.340 *Interval:* The interval can be programmed within a range of 1–1'440 min.

5.3.2.44 *Run Time:* Enter the time the relay stays active.
 Range: 5–32'400 sec.

5.3.2.54 *Delay:* during run time plus the delay time the signal and control outputs are held in the operating mode programmed below.
 Range: 0–6'000 sec.

5.3.2.6 *Signal Outputs:* Select operating mode of the signal output:

Cont.: Signal outputs continue to issue the measured value.

Hold: Signal outputs hold the last valid measured value.
 Measurement is interrupted. Errors, except fatal errors, are not issued.

Off: Signal outputs are switched off (set to 0 or 4 mA).
 Errors, except fatal errors, are not issued.

5.3.2.7 *Output/Control:* Select operating mode of the controller output:

Cont.: Controller continues normally.

Hold: Controller continues based on the last valid value.

Off: Controller is switched off.

5.3.2.24 *daily*

The relay contact can be activated daily, at any time of a day.

5.3.2.341 *Start time:* to set the start time proceed as follows:

- 1 Press [Enter], to set the hours.
- 2 Set the hour with the [▲] or [▼] keys.
- 3 Press [Enter], to set the minutes.
- 4 Set the minutes with the [▲] or [▼] keys.
- 5 Press [Enter], to set the seconds.
- 6 Set the seconds with the [▲] or [▼] keys.

Range: 00:00:00–23:59:59

5.3.2.44 *Run Time:* see Interval

5.3.2.54 *Delay:* see Interval

5.3.2.6 *Signal Outputs:* see Interval

5.3.2.7 *Output/Control:* see Interval

5.3.2.24 *weekly*

The relay contact can be activated at one or several days, of a week.
 The daily starting time is valid for all days.

5.3.2.342 Calendar:

5.3.2.342.1 *Start time:* The programmed start time is valid for each of the programmed days. To set the start time see [5.3.2.341, p. 98](#).

Range: 00:00:00–23:59:59

5.3.2.342.2 *Monday:* Possible settings, on or off
 to

5.3.2.342.8 *Sunday:* Possible settings, on or off

5.3.2.44 *Run Time:* see Interval

5.3.2.54 *Delay:* see Interval

5.3.2.6 *Signal Outputs:* see Interval

5.3.2.7 *Output/Control:* see Interval

5.3.2.1 *Function = Fieldbus:*

The relay will be switched via the Profibus input. No further parameters are needed.

- 5.3.2.1 **Function = End of Batch:**
- This function is only available on relay 2. It is used to communicate with canal switching instruments from third-party suppliers. The relay closes for 1 sec. after each valid measurement. If End of Batch is selected, no further selection is possible.
- 5.3.4 Input:** The functions of the relays and signal outputs can be defined depending on the position of the input contact, i.e. no function, closed or open.
- 5.3.4.1 **Active:** Define when the input should be active:
The measurement is interrupted during the time the input is active.
- No:* Input is never active.
- When closed* Input is active if the input relay is closed
- When open:* Input is active if the input relay is open
- 5.3.4.2 **Signal Outputs:** Select the operation mode of the signal outputs when the relay is active:
- Cont.:* Signal outputs continue to issue the measured value.
- Hold:* Signal outputs issue the last valid measured value. Measurement is interrupted. Errors, except fatal errors, are not issued.
- Off:* Set to 0 or 4 mA respectively. Errors, except fatal errors, are not issued.
- 5.3.4.3 **Output/Control:** (relay or signal output):
- Cont.:* Controller continues normally.
- Hold:* Controller continues on the last valid value.
- Off:* Controller is switched off.
- 5.3.4.4 **Fault:**
- No:* No message is issued in pending error list and the alarm relay does not close when input is active. Message E024 is stored in the message list.
- Yes:* Message E024 is issued and stored in the message list. The Alarm relay closes when input is active.
- 5.3.4.5 **Delay:** Time which the instrument waits, after the input is deactivated, before returning to normal operation.
Range: 0–6'000 sec

5.4 Miscellaneous

- 5.4.1 *Language*: Set the desired language.
Available settings: German /English/French/Spanish
- 5.4.2 *Set defaults*: Reset the instrument to factory default values in three different ways:
- ♦ **Calibration**: Sets calibration values back to default. All other values are kept in memory.
 - ♦ **In parts**: Communication parameters are kept in memory. All other values are set back to default values.
 - ♦ **Completely**: Sets back all values including communication parameters.
- 5.4.3 *Load Firmware*: Firmware updates should be done by instructed service personnel only.
- 5.4.4 **Password**: Select a password different from 0000 to prevent unauthorized access to the menus "Messages", "Maintenance", "Operation" and "Installation".
Each menu may be protected by a *different* password.
If you forgot the passwords, contact the closest SWAN representative.
- 5.4.5 *Sample ID*: Identify the process value with any meaning full text, such as KKS number.
- 5.4.6 *Line Break Detection*: Define if message E028 should be issued in case of a line break on signal output 1 or 2.
Choose between <Yes> or <No>.

5.5 Interface

Select one of the following communication protocols. Depending on your selection, different parameters must be defined.

5.5.1 *Protocol: Profibus*

- 5.5.20 Device address: Range: 0–126
- 5.5.30 ID-Nr.: Range: Analyzer; Manufacturer; Multivariable
- 5.5.40 Local operation: Range: Enabled, Disabled

5.5.1 *Protocol: Modbus RTU*

- 5.5.21 Device address: Range: 0–126
- 5.5.31 Baud Rate: Range: 1200–115 200 Baud
- 5.5.41 Parity: Range: none, even, odd

5.5.1 *Protocol: USB stick*

Only visible if an USB interface is installed. No further settings are possible.

5.5.1 *Protocol: HART*

- Device address: Range: 0–63

10. Material Safety Data sheets

10.1. Reagents

Catalogue No.:	A-85.410.120
Product name:	OXYCON ON-LINE DPD
Catalogue No.:	A-85.410.120
Product name:	OXYCON ON-LINE Buffer
Catalogue No.:	A-85.419.200
Product name:	OXYCON ON-LINE KI
Catalogue No.:	A-85.112.300
Product name:	Calibration Solution pH 4
Catalogue No.:	A-85.113.300
Product name:	Calibration Solution pH 7
Catalogue No.:	A-85.114.300
Product name:	Calibration Solution pH 9

Download MSDS

The current Material Safety Data Sheets (MSDS) for the above listed Reagents are available for downloading at www.swan.ch.

11. Default Values

Note: The parameter Cleaning is only visible if an optional Cleaning Module is connected to the AMI Codes II.
The parameters pH and Temperature are only visible if the option pH is installed.

Operation:

Sensors:	Filter Time Const.:.....	30 s
	Hold after Cal.:.....	120 s
	Meas. Interval:.....	10 min
	Default pH (If pH option is not installed).....	7.00 pH
Alarm Relay	same as in Installation
Relay 1 and 2	same as in Installation
Input	same as in Installation
Logger:	Logger Interval:.....	Event Driven
	Clear Logger:.....	no
Display:	Screen 1 and 2; Row 1:.....	Total chlorine 1
	Screen 1 and 2; Row 2:.....	Total chlorine 2
	Screen 1 and 2; Row 3:.....	None

Installation:

Sensor:	Dimension:.....	ppm
	Ref. Verification:.....	0.255
	Meas. Range:.....	Standard
	Standards:	
	Standard 1.....	pH 7
	Standard 2.....	pH 9
	Cleaning.....	2 Solutions
Signal Output	Parameter:.....	Total chlorine 1
1 & 2	Current loop:.....	4 - 20 mA
	Function:.....	linear
	Scaling, Total chlorine 1 & 2: Range low:.....	0.00 ppm
	Scaling, Total chlorine 1 & 2: Range high:.....	5.00 ppm
	Scaling, Calc. dichloramine: Range low:.....	0.00 ppm
	Scaling, Calc. dichloramine: Range high:.....	5.00 ppm
	Scaling: Temperature: Range low:.....	0.0 °C
	Scaling: Temperature: Range high:.....	50.0 °C
	Scaling: pH: Range low:.....	0.00 pH
	Scaling: pH: Range high:.....	14.00 pH
	Scaling: Sample Flow: Range low:.....	0 B/s
	Scaling: Sample Flow: Range high:.....	200 B/s

Alarm Relay	Alarm Disinfection.:	
	Total chlorine 1, Alarm high:	20.00 ppm
	Total chlorine 1, Alarm low:	0.00 ppm
	Total chlorine 1, Hysteresis:	0.10 ppm
	Total chlorine 1, Delay:	5 s
	Total chlorine 2, Alarm high:	20.00 ppm
	Total chlorine 2, Alarm low:	0.00 ppm
	Total chlorine 2, Hysteresis:	0.10 ppm
	Total chlorine 2, Delay:	5 s
	Calc. Dichl., Alarm high:	20.00 ppm
	Calc. Dichl., Alarm low:	0.00 ppm
	Calc. Dichl., Hysteresis:	0.10 ppm
	Calc. Dichl., Delay:	5 s
	Sample Temp.: Alarm High:	55 °C
	Sample Temp.: Alarm Low:	5 °C
	Sample Flow: Flow Alarm:	yes
	Sample Flow: Alarm High:	500 B/s
	Sample Flow: Alarm Low:	10 B/s
	pH: Alarm high:	14.00 pH
	pH: Alarm low:	0.00 pH
	pH: Hysteresis:	0.10 pH
	pH: Delay:	5 s
	Case temp. high:	65 °C
	Case temp. low:	0 °C
Relay 1 and 2	Function:	Limit upper
	Parameter:	Total chlorine 1
	Setpoint:	20.00 ppm
	Hysteresis:	0.10 ppm
	Delay:	30 s

If Function = Control upw. or dnw:

Parameter:	Total chlorine 1
Settings: Actuator:	Frequency
Settings: Pulse Frequency:	120/min
Settings: Control Parameters: Setpoint:	20.00 ppm
Settings: Control Parameters: P-band:	0.10 ppm
Parameter:	Total chlorine 2
Settings: Actuator:	Frequency
Settings: Pulse Frequency:	120/min
Settings: Control Parameters: Setpoint:	20.00 ppm
Settings: Control Parameters: P-band:	0.10 ppm

Parameter: **Calc. Dichl.**
 Settings: Actuator: Frequency
 Settings: Pulse Frequency: 120/min
 Settings: Control Parameters: Setpoint: 20.00 ppm
 Settings: Control Parameters: P-band: 0.10 ppm

Parameter: **Temperature**
 Settings: Actuator: Frequency
 Settings: Pulse Frequency: 120/min
 Settings: Control Parameters: Setpoint: 30 °C
 Settings: Control Parameters: P-band: 1 °C

Parameter: **Sample Flow**
 Settings: Actuator: Frequency
 Settings: Pulse Frequency: 120/min
 Settings: Control Parameters: Setpoint: 200 B/s
 Settings: Control Parameters: P-band: 20 B/s

Parameter: **pH**
 Settings: Actuator: Frequency
 Settings: Pulse Frequency: 120/min
 Settings: Control Parameters: Setpoint: 7 pH
 Settings: Control Parameters: P-band: 0.1 pH

Common settings

Settings: Control Parameters: Reset time: 0 s
 Settings: Control Parameters: Derivative Time: 0 s
 Settings: Control Parameters: Control Timeout: 0 min
 Settings: Actuator: Time proportional
 Cycle time: 60 s
 Response time: 10 s
 Settings: Actuator: Motor valve
 Run time: 60 s
 Neutral zone: 5%

If Function = Timer:

Mode: Interval
 Interval: 1 min
 Mode: daily
 Start time: 00.00.00
 Mode: weekly
 Calendar; Start time: 00.00.00
 Calendar; Monday to Sunday: Off
 Run time: 10 s
 Delay: 5 s

	Signal output:.....	cont
	Output/Control:	cont
Input:	Active.....	when closed
	Signal Outputs	hold
	Output/Control	off
	Fault.....	no
	Delay	10 s
Miscellaneous	Language:.....	English
	Set default:	no
	Load firmware:.....	no
	Password:.....	for all modes 0000
	Sample ID:.....	- - - - -
	Line break detection	no

12. Index

A

Alarm	
pH	94
Sample flow	93
Alarm Relay	12, 32, 92
Application range	11

C

Cable thicknesses	28
Cal. History	82
Calendar	98
Calibration	
pH	41, 53, 83
Changing values	45
Cleaning module	12
Current outputs	35

D

Disassemble the solenoid valve . .	63
Disinfectant	11

E

Electrical wiring	20
-----------------------------	----

F

Fill System.	40, 83
Flow Alarm	66, 93
Fluidics.	14

H

HART	37
----------------	----

I

Input	12, 32
Instrument Setup	20

Interface

HART	37
Modbus	36
Profibus	36
USB	37
Interrupt measurement	12

L

Logger.	86, 103
-----------------	---------

M

Measurement interval	49, 103
Message List	81
Modbus	36
Mounting requirements	21

O

On-site requirements	17, 20
--------------------------------	--------

P

Pending Errors	81
pH Electrode	20, 41, 59, 82
pH gain	66
pH Measurement	12, 82
pH offset	66
Power Supply	17
Process calibration	21
Process DIS	41
Process pH.	53, 83
Profibus	37

R

Reagent consumption.	49
Relay	12, 94, 104
Relay Box.	12

S

Sample Flow	39, 82, 93
Sample requirements	17
Signal Outputs	11, 35, 87
Simulation	83
Slope photometry	66
Software	44
Solenoid valve	63
Standard pH	54, 83

T

Terminals	30, 32–33, 36
Tube numbering	62

U

USB Interface	37
-------------------------	----

V

Ver. History	81
Verification.	51, 83, 87

W

Wire	28
----------------	----

Z

Zero photometry	66
---------------------------	----

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

Swan Products - Analytical Instruments for:



Swan is represented worldwide by subsidiary companies and distributors and cooperates with independent representatives all over the world. For contact information, please scan the QR code.

Swan Analytical Instruments · CH-8340 Hinwil
www.swan.ch · swan@swan.ch

SWISS  MADE

